

Micro Hi-Fi Component System

Operating Instructions



CMT-GP8D


WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire, do not cover the ventilation of the apparatus with news papers, table-cloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

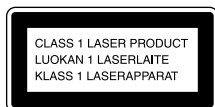

This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.



Don't throw away the battery with general house waste, dispose of it correctly as chemical waste.

Except for Russian model



ENERGY STAR[®] is a U.S. registered mark. As an ENERGY STAR[®] partner, Sony Corporation has determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.

This system incorporates Dolby¹⁾ Digital and DTS²⁾ Digital Surround System.

¹⁾ Manufactured under license from Dolby Laboratories.

“Dolby”, “Pro Logic”, and the double-D symbol are trademarks of Dolby Laboratories.

²⁾ Manufactured under license from Digital Theater Systems, Inc. “DTS” and “DTS 2.0 + Digital Out” are trademarks of Digital Theater Systems, Inc.

Table of Contents

How to use this manual.....	5
Playable discs.....	5
<hr/>	
Getting Started	
Hooking up the system.....	7
Setting the clock.....	10
Selecting a language	10
<hr/>	
DVD/VIDEO CD/CD/MP3/JPEG	
- Play	
Loading a disc.....	11
Playing a disc	11
— Normal Play/Shuffle Play	
Playing DVDs using the menu.....	13
Playing VIDEO CDs with PBC functions (Ver. 2.0).....	14
— PBC Play	
Playing repeatedly.....	14
— Repeat Play	
Creating your own program.....	15
— Program Play	
Using the on-screen display to search.....	16
<hr/>	
DVD - Various functions	
Changing the sound/subtitle/angle.....	18
Changing the language.....	19
— Language	
Adjusting the image and audio settings.....	20
— AV	
Restricting disc playback.....	21
— Rating (Parental Control)	
System setup item list	23
<hr/>	
Tuner	
Presetting radio stations.....	24
Listening to the radio.....	25
— Preset Tuning	
— Manual Tuning	
<hr/>	
Tape - Play	
Loading a tape	27
Playing a tape.....	27
<hr/>	
Tape - Recording	
Recording your favorite CD tracks on a tape	28
— CD-TAPE Synchro Recording	
Recording on a tape manually	29
— Manual Recording	
<hr/>	
Sound Adjustment	
Selecting the sound effect.....	30
Singing along: Karaoke	30
<hr/>	
Timer	
Falling asleep to music	32
— Sleep Timer	
Waking up to music.....	32
— Play Timer	
Timer recording radio programs.....	33
— Rec Timer	
<hr/>	
Display	
Turning off the display	34
— Power Saving Mode	
Adjusting the brightness of the indicators	35
Viewing information about the disc in the display	35
Viewing information about the disc in the on-screen display	36

continued

Optional Components

Hooking up optional components	37
Listening to audio from a connected component	38
Enjoying the 5.1 channel sound with the optional amplifier.....	39
Recording audio from a connected component	39
Recording on a connected component	39

Troubleshooting






Problems and remedies	40
Messages	44

Additional Information

Precautions	45
Specifications	47
Glossary	48
List of button locations and reference pages	51

How to use this manual

- This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.
- The English OSD screen (on-screen display) is used for illustration purposes only.
- The following symbols are used in this manual.

Symbol	Meaning
	Functions that can be used with DVDs
	Functions that can be used with VIDEO CDs
	Functions that can be used with audio CDs
	Functions that can be used with MP3 audio tracks
	Functions available for JPEG files

Playable discs

You can play back the following discs on this system. Other discs cannot be played back.


List of playable discs

Format of discs	Disc logo
DVD VIDEOS	
VIDEO CDs	
Audio CDs	
CD-R/CD-RW (audio data/ MP3 files/ JPEG files)	   

The “DVD VIDEO” logo is a trademark.

Region code of DVDs you can play on this system

Your system has a region code printed on the back of the unit and will only play DVDs labeled with identical region code.

DVDs labeled  will also be played on this system.

If you try to play any other DVD, the message “Playback prohibited by area limitations.” will appear on the TV screen. Depending on the DVD, no region code indication may be labeled even though playing the DVD is prohibited by area restrictions.

Discs that this system cannot play

- CD-ROMs (except for extension “.MP3”, “.JPG” or “.JPEG”)
- CD-Rs/CD-RWs other than those recorded in the following formats:
 - music CD format
 - video CD format
 - MP3 (MPEG1 Audio Layer-3)/JPEG format that conforms to ISO9660* Level 1/Level 2 or Joliet
- Data part of CD-Extras
- Super Audio CDs
- DVD-RWs in VR mode
- DVD-ROMs
- DVD-RAMs
- DVD Audio discs
- A DVD with a different region code.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs.
- A disc with paper or stickers on it.
- A disc that has the adhesive, cellophane tape, or a sticker still left on it.

* A logical format of files and folders on a CD-ROMs, defined by ISO (International Organization for standardization).

continued

Notes about CD-R/CD-RW/ DVD-R/DVD-RW (Video mode)/ DVD+R/DVD+RW

- In some cases, CD-Rs, CD-RWs, DVD-Rs, DVD-RWs (Video mode) (DVD-RWs created in video mode have the same format as a DVD VIDEO), DVD+R or DVD+RW cannot be played on this system depending upon the recording quality or physical condition of the disc, or the characteristics of the recording device. Furthermore, the disc will not play if it has not been correctly finalized. For more information, see the operating instructions for the recording device.
- A disc recorded in packet write format cannot be played.

Note on playback operations of DVDs and VIDEO CDs

Some playback operations of DVDs and VIDEO CDs may be intentionally set by software producers. Since this system plays DVDs and VIDEO CDs according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the instructions supplied with the DVDs or VIDEO CDs.

Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

Cautions when playing a disc that is recorded in Multi Session


- When playing a disc which contains audio tracks in music CD format, MP3 audio tracks and JPEG image files, only the audio tracks in music CD format can be played back.
- CD-R and CD-RW discs recorded in multi-session that have not ended by “closing the session” are not supported.

Copyrights

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.


Hooking up the system

Perform the following procedures **1** to **6** to hook up your system using the supplied cords and accessories.

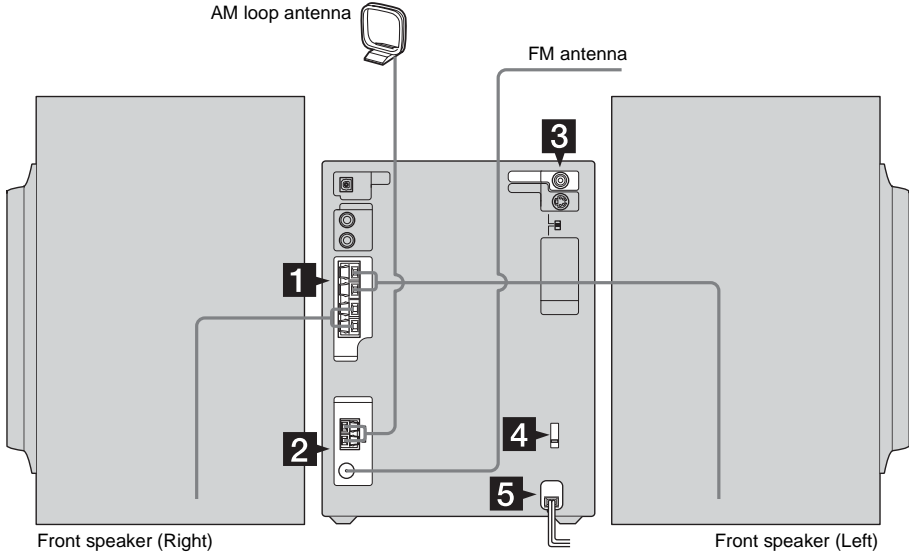


1 Connect the speakers.

Connect the right and left speaker cords to the SPEAKER jacks as shown below. Place the right speaker on the right side and the left speaker on the left side of the unit. Each speaker has a subwoofer on the side. When placing the speakers, be sure to leave at least 5 cm open subwoofer sides to obtain a better bass reproduction.

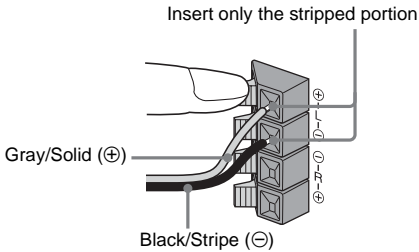


2 Connect the FM and AM antennas.

Set up the AM loop antenna, then connect it.

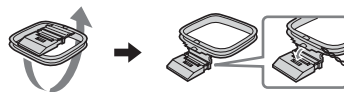

Plug type **A**


AM loop antenna

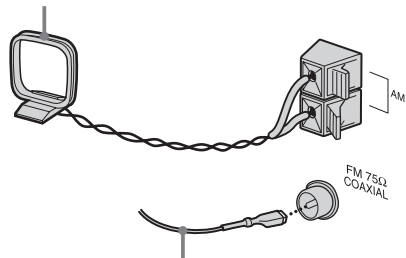

Extend the FM lead antenna horizontally

Plug type ②


AM loop antenna

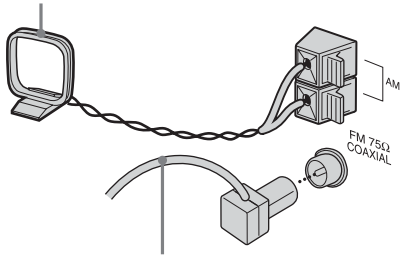

Extend the FM lead antenna horizontally

Plug type ③

AM loop antenna

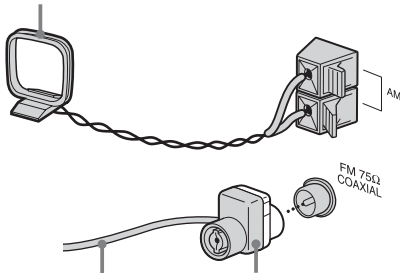


Extend the FM lead antenna horizontally

North American model:
Connect white side.
Other models:
Connect brown side.

Note

Keep the antennas away from the speaker cords.

3 Connect the video input jack of your TV to the VIDEO OUT jack with the supplied video cable.

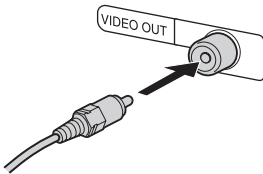


When using a TV

Turn on the TV and select the video input so that you can view the pictures from this system.

When connecting a video deck

Connect the TV and the video deck using video and audio cords (not supplied) as shown below.

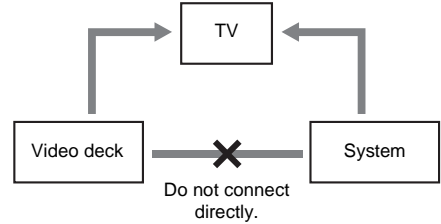

If you connect a video deck between this system and the TV, you may experience video leakage when watching the video signal from this system. Do not connect a video deck between this system and the TV.

Note

Do not place the TV on this system.

Tip

For even higher quality video images:


For details on connecting your TV through the

➡ LINE-TV jack (for Russian model) or COMPONENT VIDEO OUT jacks (for other models) and setting VIDEO OUT SELECTOR, see page 38.

- For Russian model, use an optional SCART cord to connect a TV. Check that the TV conforms to RGB signals. If the TV conforms to RGB signals, change the input mode of the TV to RGB signals, then set VIDEO OUT SELECTOR on the unit to ➡ LINE-TV while the system is off. Refer to the operating instructions supplied with the TV to be connected.
- For other models, use an optional component video cord to connect the COMPONENT VIDEO input jacks on your TV to the COMPONENT VIDEO OUT jacks on this unit, then set VIDEO OUT SELECTOR to COMPONENT VIDEO OUT while the system is off.
- You can use an optional S video cord to connect the S VIDEO input jack on your TV to the S VIDEO OUT jack, then set VIDEO OUT SELECTOR to S VIDEO OUT.

- 4 For models with a voltage selector, set VOLTAGE SELECTOR to the local power line voltage.**

Depending on the model, the VOLTAGE SELECTOR may differ.

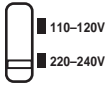

- 5 Connect the power cord to a wall outlet.**

If the supplied adapter on the plug does not fit your wall outlet, detach it from the plug (only for models equipped with an adapter). To turn on the system, press I/⏻.

- 6 (Except for Russian model) Set the color system to PAL or NTSC depending on the color system of your TV.**

The color system is factory set to NTSC for region code 3 models, and PAL for other region code models. Each time you perform the procedure below, the color system changes as follows:

NTSC ↔ PAL

- 1 Press DVD ► (or DVD ►|| on the unit) to switch the function to DVD.
- 2 Press ■ to stop playback.
- 3 Press I/⏻ to turn off the system.
- 4 Press I/⏻ on the unit while holding down ■ on the unit.
The system turns on and the color system is changed.


Notes

- A disturbance in the TV screen may be present for a moment after changing the color system as described above.
- When you play back a VIDEO CD recorded in a different color system from the one you set to the unit, the picture image may be distorted.
- To set the VCD color system, see page 20.

To connect optional components

See page 37.

Inserting two R6 (size AA) batteries into the remote

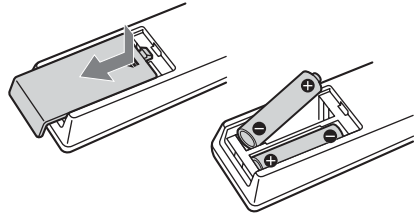

Note


If you do not use the remote for a long period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Tip

With normal use, the batteries should last for about six months. When the remote no longer operates the system, replace both batteries with new ones.

Attaching the speaker pads

Attach the supplied speaker pads to the bottom of the speakers to stabilize the speakers and prevent them from slipping.

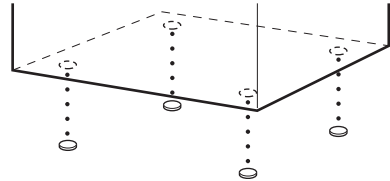

Setting the clock

Use buttons on the remote for the operation.

- 1** Press I/⏻ to turn on the system.
- 2** Press CLOCK/TIMER SET.
- 3** Press I◀◀ or ▶▶I repeatedly to set the hour.
- 4** Press ENTER.
- 5** Press I◀◀ or ▶▶I repeatedly to set the minute.
- 6** Press ENTER.

The clock starts working.

To adjust the clock

- 1** Press CLOCK/TIMER SET.
- 2** Press I◀◀ or ▶▶I to select "CLOCK SET", then press ENTER.
- 3** Do the same procedures as step 3 to 6 above.

Notes

- The clock settings are canceled when you disconnect the power cord or if a power failure occurs.
- You cannot set the clock in Power Saving Mode (page 34).

Selecting a language


You can change the on-screen display language.

- 1** Turn on your TV and select the video input.
- 2** Press I/⏻ to turn on the system.
- 3** Press DVD ▶ (or DVD ▶▶ on the unit) to switch the function to DVD.
- 4** Press ■ to stop playback.
- 5** Press DVD SETUP in stop mode.
- 6** Press ◀ or ▶ repeatedly to select "Language", then press ENTER.
- 7** Press ↑ or ↓ repeatedly to select "OSD", then press ENTER.
- 8** Press ↑ or ↓ repeatedly to select a language from the displayed list, then press ENTER.
- 9** Press DVD SETUP to turn off the Setup Display.

Loading a disc

Use buttons on the unit for the operation.

- 1 Press **▲**.
- 2 Place a disc with the label side up on the disc tray.

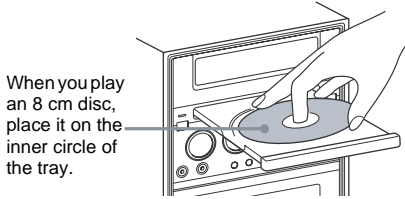

- 3 Press **▲** again to close the disc tray.

Notes

- Do not use a disc with tape, seals or paste on it as this may cause malfunction.
- Do not forcibly press the disc tray closed with your finger, as this may cause malfunction.


Playing a disc

— Normal Play/Shuffle Play




Before playing a DVD, VIDEO CD or JPEG turn on your TV and select the video input. Depending on the DVD or VIDEO CD, some operations may be different or restricted. Refer to the operating instructions supplied with the disc.

Example: When playing a DVD

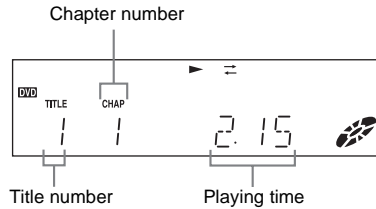

Example: When playing a CD

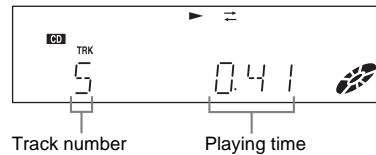

Press **DVD ►** (or **DVD ►||** on the unit).

The function switches to DVD and playback starts automatically.

Other operations

To	Do this
Stop play	Press ■.
Pause	Press ■■ (or DVD ►■■ on the unit). ¹⁾ Press ■■ again to go to the next frame (DVD/VIDEO CD only). Press DVD ► (or DVD ►■■ on the unit) to resume play.
Select a track, image or chapter	Press ◀◀ or ▶▶ repeatedly during play or pause. Press ◀◀ once during play or pause to go back to the beginning of the current track (except for MP3/JPEG).
Locate a point quickly in fast forward or fast reverse	Press ◀◀ or ▶▶ during play. For DVD or VIDEO CD, each time you press the button, searching speed changes.
(Lock Search) (Except for MP3/JPEG) ²⁾	For CD, searching speed does not change. To return to Normal Play, press DVD ► (or DVD ►■■ on the unit).
Play all tracks on the disc in random order (Shuffle Play) ³⁾	Press PLAY MODE repeatedly in stop mode until "SHUF" appears in the display, then press DVD ► (or DVD ►■■ on the unit).
Watch frame by frame (Slow-motion Play) (DVD/VIDEO CD only) ¹⁾²⁾	During play, press SLOW ► . Each time you press the button, the playback speed changes. To return to Normal Play, press DVD ► (or DVD ►■■ on the unit).
Rotate the current image (JPEG only)	Press ◀ or ▶. Each time you press ▶, the image turns clockwise by 90°. Each time you press ◀, the image turns counterclockwise by 90°.
Switch to DVD function from another source	Press DVD ► (or DVD ►■■ on the unit) (Automatic Source selection). Playback starts automatically when a disc is loaded.
Cut the sound	Press MUTING. Press MUTING again or VOLUME + to restore sound.
Remove a disc	Press ▲ on the unit.

¹⁾ There may be some disturbance in the video image.

²⁾ For DVDs and VIDEO CDs, no sound is output.

³⁾ You cannot perform Shuffle Play on DVDs and VIDEO CDs with PBC function.

Notes

- Depending on the DVD or VIDEO CD, some operations may be restricted.
- Maximum number of albums on a disc: 999 (The maximum number of MP3 audio tracks or JPEG image files that can be contained on a disc is 999.) However, when a large number of non-MP3/JPEG files are present, the maximum number of albums, tracks and files may decrease.
- Playback is possible up to 15 levels.
- The system supports MP3 audio tracks recorded with a bit rate of 32 to 320 kbps and a sampling frequency of 32/44.1/48 kHz for MPEG1 Audio Layer-3.
- An album that does not include an MP3 audio track or JPEG image file is skipped.
- If you put the extension ".MP3" to data not in MP3 format, the system cannot recognize the data properly and will generate a loud noise which could damage your speaker system.
- The following discs take a longer time to start playback.
 - a disc recorded with complicated tree structure.
 - a disc recorded in Multi Session.
 - a disc to which data can be added (non-finalized disc).
- Some CD-Rs or CD-RWs cannot be played on this system depending on file format.

Tip

When playing the data disc contained MP3 audio tracks and JPEG image files, set "Data CD Priority" (page 20).

Resuming playback from the point you stopped the disc

— Resume Play

This system memorizes the point where you stopped the disc so you can resume from that point.

- While playing a disc, press ■ to stop playback.
"RESUME" appears in the display. If "RESUME" does not appear, Resume Play is not available.
- Press DVD ► (or DVD ►■■ on the unit).
The player starts playback from the point you stopped the disc in step 1.

Notes

- You cannot perform Resume Play during Shuffle Play or Program Play.
- Depending on where you stopped the disc, the system may resume playback from a different point.
- Resume play is canceled when:
 - you press ■ in stop mode.
 - you turn off the system.
 - you disconnect the power cord.
 - you open the disc tray.
 - you change the play mode.

Playing a track by entering the track number in Normal Play mode (on the remote only)

Press the number button(s) to enter the track number of the track you want to play.

To enter a track number over 10

1 Enter the corresponding digits.

2 Press ENTER.

Example:

To play track number 30, press 3 and 0, then press ENTER.

Selecting an album/track/file using the on-screen display (MP3/JPEG only)

- 1** Press DVD TOP MENU in stop mode.
The list of albums contained in the disc appears in the TV screen.
- 2** Press ↑/↓/←/→ repeatedly to select an album you want to play, then press ENTER.
The list of tracks or files contained in the current album appears.
- 3** Press ↑/↓/←/→ repeatedly to select a track or file, then press ENTER.
The selected track or file starts playing.

Notes

- On the TV screen, up to 8 characters can be displayed for album names, 12 characters for track/file names. When multiple album names use the same first 8 characters, the tracks and files in those albums are displayed together in a single folder.
- Only the letters in the alphabet and numbers can be used for album or file names. Anything else is displayed as “_”.
- If an MP3 file is played, indicated elapsed time may be different from the actual time.

Playing DVDs using the menu

DVD

Some DVDs have menus to help you enjoy the DVDs. You can play DVDs using these menus on the TV screen.

- Using the DVD top menu

A DVD is divided into long sections of a picture or a music feature called “titles”. When you play a DVD which contains several titles, you can select the title you want using the menu.

- Using the DVD menu

Some DVDs allow you to select the disc contents using a menu. When you play these DVDs, you can select items such as the language for the subtitles and the language for the sound using the DVD menu.

- 1 Press DVD TOP MENU or DVD MENU.**
The menu appears on the TV screen. The contents of the menu vary from disc to disc.
- 2 Press ↑/↓/←/→ or the number buttons to select the title or item you want to play.**
- 3 Press ENTER.**

Playing VIDEO CDs with PBC functions (Ver. 2.0)

— PBC Play



You can use PBC* menus on your TV screen to enjoy the disc's interactive software. The menu format and structure may differ depending on each disc.

* PBC: Playback Control

- 1 Press DVD ► (or DVD ►|| on the unit) to start playing a VIDEO CD with PBC functions (Ver. 2.0).**
The PBC menu appears on the TV screen.
- 2 Press the number buttons to select the item number you want.**
- 3 Press ENTER.**
- 4 Continue playback according to the instructions on the menus to enjoy interactive playback.**

Refer to the operating instructions supplied with the disc, as the operating procedure may differ according to the VIDEO CD.

To go back to a previous menu

Press ↶ RETURN.

Note

Depending on the VIDEO CD, "Press ENTER" in step 3 may appear as "Press DVD ►" in the operating instructions supplied with the disc. In this case, press DVD ► (or DVD ►|| on the unit).

Tip

To cancel playback with PBC functions, press DVD MENU repeatedly in stop mode until "PBC Off" appears on the TV screen. Playback starts from the selected track. Still images, such as the menu screens, will not be shown.

To return to PBC playback, press DVD MENU repeatedly in stop mode until "PBC On" appears on the TV screen.

Playing repeatedly

— Repeat Play



You can play all the tracks/files or a single title/chapter/track/file on a disc repeatedly.

Using the front panel display

Press REPEAT during play until "REP" or "REP1" appears.

REP: For all the tracks/files on the disc up to five times.

REP1: For a single title*/chapter*/track/file only.

* You can check whether a title or chapter is being repeatedly played on the TV screen.

To cancel Repeat Play

Press REPEAT repeatedly until both "REP" and "REP1" disappear.

Notes

- Depending on the DVD, you cannot perform Repeat Play.
- You cannot perform Repeat Play during PBC playback of VIDEO CDs (page 14).
- When you select "REP1", that title/chapter/track/file is repeated endlessly until "REP1" is canceled.

Using the on-screen display

Press REPEAT repeatedly during play.

Each time you press the button, the setting changes cyclically as follows:

■ When playing a DVD

- Off: does not play repeatedly.
- Title: repeats the current title on a disc.
- Chapter: repeats the current chapter.

■ When playing a VIDEO CD/CD/MP3/JPEG

- Off: does not play repeatedly.
- All: repeats all the tracks/files on a disc.
- Track (except for JPEG): repeats the current track.
- File (JPEG only): repeats the current file.

To cancel Repeat Play

Select “Off”.

Notes

- Depending on the DVD, you cannot perform Repeat Play.
- You cannot perform Repeat Play during PBC playback of VIDEO CDs (page 14).
- If you select “All”, the program repeats up to five times.

Tip

You can set Repeat Play when the playback is stopped. Press REPEAT repeatedly to select the setting, then press DVD ► (or DVD ►|| on the unit) to start Repeat Play.

Creating your own program

— Program Play



You can make a program of up to 12 steps. You can synchro record the programmed tracks onto a cassette tape (page 28).

The program operation can only be set using the TV screen.

1 Press DVD ► (or DVD ►|| on the unit) to switch the function to DVD.

Playback starts.

2 Press ■ twice to stop playback.

3 Press PLAY MODE repeatedly in stop mode until the Program Display appears on the TV screen.

Program	Track		
1 []	4 ---	7 ---	10 ---
2 ---	5 ---	8 ---	11 ---
3 ---	6 ---	9 ---	12 ---
All Clear	Play Program		

4 Press ↑/↓/←/→ repeatedly to select the desired step number.

5 Press the number buttons to select the track you want to program.

If you make a mistake, press CLEAR to cancel the number, then select another number.

Program	Track		
1 [3]	4 ---	7 ---	10 ---
2 ---	5 ---	8 ---	11 ---
3 ---	6 ---	9 ---	12 ---
All Clear	Play Program		

6 To program other tracks, repeat steps 4 and 5.

7 Press ↑/↓/←/→ repeatedly to select “Play Program”, then press DVD ► (or DVD ►|| on the unit).

Program Play starts.

continued

Other operations

To	Do this
Cancel Program Play	Press PLAY MODE repeatedly in stop mode until "Continue" appears.
Clear a programmed step	Press ↑/↓/←/→ repeatedly to select a step number, then press CLEAR in stop mode.
Clear all the programmed steps	Press ↑/↓/←/→ repeatedly to select "All Clear", then press ENTER.

Note

When you switch the play mode to "Program" while "REP" is selected, "REP" is automatically canceled.

Tip

The program you made remains after Program Play finishes. To play the same program again, press DVD **▶** (or DVD **▶||** on the unit). However, the program is cleared when you open the disc tray.

Using the on-screen display to search



You can search for a chapter (DVD) and track (VIDEO CD, CD). As chapters and tracks are assigned unique numbers on the disc, so you can select the desired one by entering its number. Or, you can search for a particular point using the time code (Time Search).

Searching for a chapter

- 1 Press TIME SEARCH.**
The Search Display appears.
- 2 Press **↑** or **↓** repeatedly to select "Chapter".**
- 3 Press the number buttons to select the desired chapter number.**
If you make a mistake, press CLEAR to cancel the number, then select another number.
- 4 Press ENTER.**
Playback starts.

Searching for a track

- 1 Press TIME SEARCH repeatedly until the Disc Search Display appears.**
- 2 Press **↑** or **↓** repeatedly to select "Track".**
- 3 Press the number buttons to select the desired track number.**
If you make a mistake, press CLEAR to cancel the number, then select another number.
- 4 Press ENTER.**
The playback starts from the selected number.

Searching for a particular point using the time code

— *Time Search*

1 Press TIME SEARCH.

■ When playing a DVD

The Search Display appears.

Press **↑** or **↓** repeatedly to select “Time”.

■ When playing a VIDEO CD/CD

The Track Search Display appears.

2 Press the number buttons to input the time code, then press ENTER.

When playing a DVD, input the playing time of the current title.

When playing a VIDEO CD/CD, input the playing time of the current track.

For example, to find the scene at 2 hours, 10 minutes, and 20 seconds after the beginning, enter “2:10:20”.

To search for a particular point of a VIDEO CD/CD

1 Press TIME SEARCH once in stop mode or twice during play.

The Disc Search Display appears.

2 Press **↑** or **↓** repeatedly to select “Time”.

3 Press the number buttons to input the time code, then press ENTER.

Input the time from the beginning of a disc.

To cancel searching

Press TIME SEARCH repeatedly until the display disappears.

Notes

- You cannot search for a scene and index of a VIDEO CD.
- The time search function does not work on a VIDEO CD (when the PBC function is on).
- You cannot input the time code or the chapter number at the same time in the Search Display.
- You cannot activate the time search or the track search at the same time in the Disc Search Display. Select the desired search method, then press ENTER.

Tip

You can change the display to show playing time or remaining time. For details, see “Viewing information about the disc in the on-screen display” on page 36.

DVD – Various functions

Changing the sound/ subtitle/angle



Changing the sound (Except for JPEG)

If a DVD is recorded with multilingual tracks or audio formats, you can select the language or audio format you want while playing the DVD. You can also output either the left or right channel sound from both speakers while playing a VIDEO CD or CD. Note that this results in monaural sound. For example, when playing a Karaoke VIDEO CD (disc with the vocals on one channel and the instruments on the other channel), you can switch the sound to cancel the vocal track and listen only to the instruments.

Press **AUDIO** repeatedly during play.

Each time you press the button, the setting changes cyclically as follows:

■ When playing a DVD

Depending on the DVD, the choice of the language and audio format varies.

When the same language is displayed twice or more times, the DVD is recorded in multiple audio formats.

■ When playing a VIDEO CD/CD

- Stereo: The standard stereo sound.
- Left: The sound of the left channel (monaural).
- Right: The sound of the right channel (monaural).

To preset the desired audio track


You can preset the system to the desired audio track with the operations described under “Changing the language” (page 19).

Notes

- When you play a DVD with the audio other than 2 channels, the sound is composed into 2 channels and output from the system speakers. However, sound is not output in “Multi Channel PCM” format.
- For discs not recorded in multiple audio format, you cannot change the sound.
- Depending on the DVD, you may not be able to change the sound even if the DVD is recorded in multiple audio format.
- For VIDEO CDs and CDs, the setting returns to “Stereo” when you turn off the system or open the disc tray.
- During DVD playback, the sound may change automatically.

Displaying the audio information of the disc (DVD only)

When you press **AUDIO**, the channels being played are displayed on the TV screen. For example, in Dolby Digital format, multiple signals ranging from monaural to 5.1 channel signals can be recorded on a DVD. Depending on the DVD, the number of recorded channels may differ.

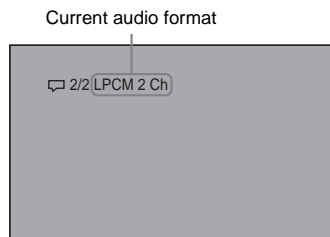

The display examples are as follows:

Format	Display
PCM (stereo)	
Dolby Digital 2 ch	
Dolby Digital 5.1 ch	
DTS	
MPEG AUDIO	

Displaying the subtitles (DVD only)

With DVDs on which multilingual subtitles are recorded, you can change the subtitle language while playing a DVD, or turn the subtitles on or off whenever you want.

For example, you can select the language you want to master and turn the subtitles on for better understanding.

Press **SUBTITLE** repeatedly during play.

Each time you press the button, the language changes.

To cancel the **SUBTITLE** setting

Press **SUBTITLE** repeatedly to select “Off”.

Note

Depending on the DVD, you may not be able to change the subtitles even if multilingual subtitles are recorded on the DVD.

Changing the angles (DVD only)

When playing a DVD on which various angles (multi-angles) for a scene are recorded, you can change the viewing angle.

For example, while playing a scene of a train in motion, you can display the view from either the front of the train, the left window of the train or from the right window without having the train’s movement interrupted.

Press **ANGLE** repeatedly during play.

Each time you press the button, the angle changes.

Note

Depending on the DVD, you may not be able to change the angles even if multi-angles are recorded on the DVD.

Changing the language

— Language



1 Press **DVD SETUP** in stop mode.

The Setup Display appears.

2 Press **←** or **→** repeatedly to select “Language”, then press **ENTER**.

3 Press **↑** or **↓** repeatedly to select an item, then press **ENTER**.

■ **OSD (on-screen display)**

Switches the display language on the TV screen. Select the language from the displayed list.

■ **DVD Menu (DVD only)**

Select the language for the DVD menu.

■ **Audio (DVD only)**

Switches the language of the sound track. Select the language from the displayed list.

■ **Subtitle (DVD only)**

Switches the language of the subtitle. Select the language from the displayed list.

4 Press **↑** or **↓** repeatedly to select a language, then press **ENTER**.

5 Press **DVD SETUP** to turn off the Setup Display.

Note

When the selected language is not recorded on the DVD, one of the recorded languages is automatically selected (except for “OSD”).

Tip

You can reset all the DVD settings except for Parental Control by performing the operations described under “To return the DVD setup to the default settings*,” perform reset as follows:” (page 44).

* Except for Parental Control settings

Adjusting the image and audio settings

— AV



1 Press DVD SETUP in stop mode.

The Setup Display appears.

Note

When a JPEG disc is in the system, the Setup Display does not appear.

2 Press ← or → repeatedly to select “AV”, then press ENTER.

3 Press ↑ or ↓ repeatedly to select an item, then press ENTER.

4 Press ↑ or ↓ repeatedly to select a setting, then press ENTER.

5 Press DVD SETUP to turn off the Setup Display.

■ TV Type


Select the aspect ratio of the connected TV. The default setting is underlined.

4:3 Pan Scan Select this when you connect a 4:3 screen TV. This setting displays the wide picture on the entire screen and cuts off the portions that do not fit.

4:3 Letter Box Select this when you connect a 4:3 screen TV. This setting displays a wide picture with bands displayed on the upper and lower portions of the screen.

16:9 Select this when you connect a wide-screen TV or a TV with a wide mode function.


- 4:3 Pan Scan

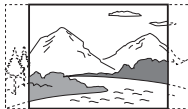

- 4:3 Letter Box



- 16:9

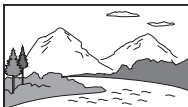

Note

Depending on the DVD, “4:3 Letter Box” may be selected automatically instead of “4:3 Pan Scan” or vice versa.

■ VCD Color Sys (except for Russian model)

Select the color system when you play a VIDEO CD.

The default setting is underlined.

<u>NTSC</u>	Changes the video signal of a PAL disc and outputs it in the NTSC system.
PAL	Changes the video signal of an NTSC disc and outputs it in the PAL system.
<u>Auto</u>	Outputs the video signal in the system of the disc, either PAL or NTSC. If your TV uses a DUAL system, select “Auto”.

■ Dolby Digital

Set the Dolby Digital settings to enjoy 5.1 channel sound when an optional amplifier is connected (see “Enjoying the 5.1 channel sound with the optional amplifier” on page 39).

■ DTS

Set the DTS settings to enjoy 5.1 channel sound when an optional amplifier is connected (see “Enjoying the 5.1 channel sound with the optional amplifier” on page 39).

■ Data CD Priority (MP3, JPEG only)

Set priority data you want to play, when you play the data disc (CD-ROM/CD-R/CD-RW) contained MP3 audio tracks and JPEG image files.

The default setting is underlined.

MP3 If an MP3 file exists on the disc, the system recognizes the disc as an “MP3 Disc”. If only JPEG files exist on the disc, the system recognizes the disc as a “JPEG Disc”.

JPEG If a JPEG file exists on the disc, the system recognizes the disc as a “JPEG Disc”. If only MP3 files exist on the disc, the system recognizes the disc as an “MP3 Disc”.

Notes

- Except for Russian model, you can change the color system of this unit according to the connected TV (page 9).
- If “Dolby Digital” or “DTS” is set to “Bit Stream”, sound is not output from the supplied speakers and optional headphone does not function, and no sound is being recorded when recording to tape.

Tip

You can reset all the DVD settings except for Parental Control by performing the operations described under “To return the DVD setup to the default settings*”, perform reset as follows.” (page 44).

* Except for Rating (Parental Control) settings

Restricting disc playback

— Rating (Parental Control)



Limiting playback by children

You can limit the playback of some DVDs according to a predetermined level such as the age of the users.

When a limited scene is played back, that scene is cut or replaced with a preset other scene.

1 Press DVD SETUP in stop mode.


The Setup Display appears.

2 Press ← or → repeatedly to select “Rating”, then press ENTER.

3 Press ↓ to select “Rating”.

When a 4-digit password has already been registered, enter the 4-digit password using the number buttons, then press ENTER.

You can then select “Rating”.

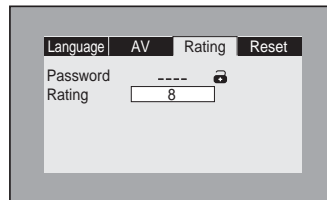

4 Press ENTER repeatedly to select the level you want.

Each time you press the button, the level changes.


The lower the value, the more strict the limitation.

5 Press ↑ to select “Password”.

6 Enter or re-enter your 4-digit password using the number buttons, then press ENTER.

The lock icon is closed and the Parental Control setting is completed.

If you make a mistake entering your password, press CLEAR before you press ENTER and input the correct number.

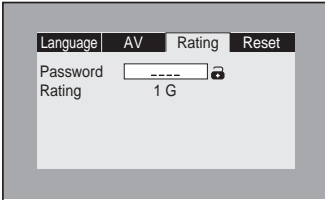

To turn off the Parental Control function and play the DVD after entering your password

Enter your 4-digit password using the number buttons, then press ENTER.

The lock icon is opened and the Parental Control function is turned off.

To change the password

- 1 In step 6, enter your 4-digit password using the number buttons, then press ENTER.
- 2 Enter a new 4-digit password using the number buttons, then press ENTER.

Playing the disc for which Parental Control is set

1 Insert the disc and press DVD ► (or DVD ► II on the unit).

The Rating Display appears.

2 Enter your 4-digit password using the number buttons, then press ENTER.

Playback starts.

Notes

- When you play DVDs which do not have the Parental Control function, playback cannot be limited on this system.
- Depending on the DVD, you may be asked to change the parental control level while playing the disc. In this case, enter your password, then change the level. If the Resume Play mode is canceled, the level returns to the original level.

Tip

If you forgot your password, select "Password" and enter "199703" using the number buttons in the Rating Display, then press ENTER. You can then enter a new 4-digit password.

System setup item list

When you press DVD SETUP, the following settings are displayed.

The default settings are underlined.

Language (page 19)

OSD	Select the language you want to use from the displayed language list.
DVD Menu	Select the language you want to use from the displayed language list.
Audio	Select the language you want to use from the displayed language list.
Subtitle	Select the language you want to use from the displayed language list.

AV (pages 20, 39)

TV Type	4:3 Pan Scan 4:3 Letter Box <u>16:9</u>
VCD Color Sys*	NTSC PAL <u>Auto</u>
Dolby Digital	<u>PCM</u> Bit Stream
DTS	<u>PCM</u> Bit Stream
Data CD Priority	<u>MP3</u> JPEG

Rating (page 21)

Password	
Rating	1 G 2 3 PG 4 PG 13 5 6 R 7 NC 17 <u>8</u>

Reset (page 44)

Reset	YES
	<u>NO</u>

* Except for Russian model

Tuner

Presetting radio stations


You can preset up to 20 FM stations and 10 AM stations. You can then tune in any of those stations simply by selecting the corresponding preset number.

Automatic tuning preset

You can automatically tune in all of the stations that can be received in your area and then store the radio frequency of the desired stations.

- 1 Press **TUNER BAND** repeatedly to select “FM” or “AM”.
- 2 Press and hold **TUNING +** or **–** until the frequency indication starts to change, then release it.

The frequency changes as the system scans for a station. Scanning stops automatically when a station is tuned in. At that time, “TUNED” and “STEREO” (for an FM stereo program) appear.

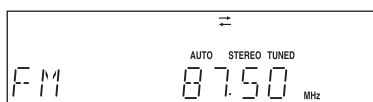


If “TUNED” does not appear and the scanning does not stop

Set the frequency of the desired radio station as described in steps 2 through 6 of “Manual tuning preset”.

- 3 Press **TUNER MEMORY**.

A preset number flashes.

Perform steps 4 and 5 while the preset number flashes.

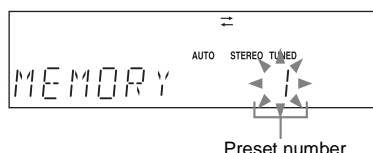

- 4 Press **PRESET +** or **–** repeatedly to select the desired preset number.

- 5 Press **ENTER**.
“COMPLETE” appears.

- 6 Repeat steps 1 through 5 to store other stations.

Manual tuning preset

You can manually tune in and store the radio frequency of the desired stations.

- 1 Press **TUNER BAND** repeatedly to select “FM” or “AM”.
- 2 Press **TUNING +** or **–** repeatedly to tune in the desired station.
- 3 Press **TUNER MEMORY**.
A preset number flashes.
Perform steps 4 and 5 while the preset number flashes.
- 4 Press **PRESET +** or **–** repeatedly to select the desired preset number.
- 5 Press **ENTER**.
“COMPLETE” appears.
- 6 Repeat steps 1 through 5 to store other stations.

Other operations

To	Do this
Tune in a station with a weak signal	Follow the procedure described in “Manual tuning preset”.
Set another station to the existing preset number	Start over from step 1. After step 3, press PRESET + or – repeatedly to select the preset number you want to store the other station.

To change the AM tuning interval (except for Russian model)

The AM tuning interval is factory-preset to 9 kHz (or 10 kHz for some areas). To change the AM tuning interval, tune in any AM station first, then turn off the system. While holding **■** on the unit, press TUNER/BAND on the unit. When you change the interval, all the AM preset stations are erased. To reset the interval, repeat the same procedure.

Note

You cannot change the AM tuning interval in Power Saving Mode (page 34).

Tip

To improve broadcast reception, adjust the supplied antennas, or connect a commercially available external antenna.

Listening to the radio


You can listen to a radio station either by selecting a preset station, or by manually tuning in the station.

Listening to a preset station

— Preset Tuning

Preset radio stations in the tuner's memory first (see "Presetting radio stations" on page 24).

- 1** Press TUNER BAND repeatedly to select "FM" or "AM".
- 2** Press PRESET + or – repeatedly to select the desired preset station.

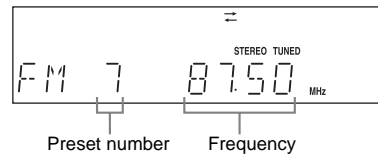

Listening to non-preset radio station

— **Manual Tuning**

- 1 Press TUNER BAND repeatedly to select “FM” or “AM”.**
- 2 Press TUNING + or – repeatedly to tune in the desired station.**

To cut the sound

Press **MUTING**.

Press **MUTING** again or **VOLUME +** to restore sound.

To listen to an FM stereo program without stereo effect

When an FM stereo program has static noise, press **FM MODE** repeatedly until “**MONO**” appears. There will be no stereo effect, but the reception will improve.


Tips

- To improve broadcast reception, adjust the supplied antennas, or connect a commercially available external antenna.
- Press and hold **TUNING +** or **–**. The frequency indication changes and scanning stops when the system tunes in a station (Automatic Tuning).
- To record the radio programs, use manual recording (pages 29 and 33).

Loading a tape

- 1 Press **▲ PUSH** on the unit.
- 2 Load a recorded/recordable tape into the cassette holder.

With the side you want to play/record facing forward.

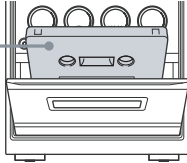

Playing a tape

You can use TYPE I (normal) tape.

- 1 Load a tape.
- 2 Press **DIRECTION** on the unit repeatedly to select “**→**” to play one side. Select “**↔**” to play both sides, or “**←**”* to play both sides repeatedly.

* The tape deck stops automatically after repeating the sequence five times.

- 3 Press **TAPE** **◀▶**.

Press **TAPE** **◀▶** again to play the reverse side. The tape starts playing.

Other operations

To	Do this
Stop play	Press ■ .
Fast-forward or rewind	Press ◀▶ or ▶▶ .
Switch to TAPE function from another source	Press TAPE ◀▶ . Playback starts automatically when a tape is loaded.
Cut the sound	Press MUTING . Press MUTING again or VOLUME + to restore sound.
Remove a tape	Press ▲ PUSH on the unit in stop mode.

Tip

When a tape is inserted, corresponding forward/reverse indicators light.

Tape – Recording

 
 




Recording your favorite CD tracks on a tape









— CD-TAPE Synchro Recording



   You can record a whole CD on a tape.


You can use TYPE I (normal) tape.

Use buttons on the unit for the operation.

- 1 Load a recordable tape.**
- 2 Press DIRECTION repeatedly to select “” to record on one side. Select “” or “” to record on both sides.**
- 3 Press TAPE   repeatedly to select recording side, then press .**

If you select both sides recording or front side recording, press TAPE   to light up the  indicator, then press . If you record on the reverse side, press TAPE   again to light up the  indicator, then press .

- 4 Press DVD   and load a disc you want to record.**

Press  twice to stop playback when playback starts.

- 5 Press CD SYNC.**

The tape deck stands by for recording.
“REC” flashes.

- 6 Press  START.**

Recording starts.

To stop recording

Press .

To record a CD by specifying track order

You can record only your favorite CD tracks using Program Play. Between steps 4 and 5, perform steps 3 to 6 of “Creating your own program” (page 15).

Notes

- CD Synchro Recording is not available with DVD, VIDEO CD, MP3 audio tracks and JPEG image files.
- You cannot listen to other sources while recording.
- If the play mode is set to Repeat Play or Shuffle Play, it automatically switches to Normal Play in step 5.
- The sound effect automatically switches to “FLAT” in step 5.

Tips

- When you record on both sides, be sure to start from the front side. If you start from the reverse side, recording stops at the end of the reverse side.
- If you select both sides recording and the tape reaches the end of the front side part-way through a track, the entire track is recorded again from the beginning of the reverse side.

Recording on a tape manually

— Manual Recording

You can record just the portions you like from a disc (DVD, VIDEO CD, CD and MP3) or radio program on a tape.

You can also record from connected components (see “Hooking up optional components” on page 37).

Use buttons on the unit for the operation.

- 1 Load a recordable tape.**
- 2 Press DIRECTION repeatedly to select “←” to record on one side. Select “↔” or “→” to record on both sides.**
- 3 Press TAPE ◀▶ repeatedly to select recording side, then press ■.**

If you select both sides recording or front side recording, press TAPE ◀▶ to light up the ▶ indicator, then press ■. If you record on the reverse side, press TAPE ◀▶ again to light up the ◀ indicator, then press ■.

- 4 Press one of the following buttons to select the desired source to record.**
 - DVD ▶||: To record from this system’s CD/DVD player. Press ■ twice to stop playback.
 - TUNER/BAND: To record from this system’s tuner.
 - MD: To record from the connected optional component to MD IN L/R jacks.

- 5 Press ● START.**

The tape deck stands by for recording.
“REC” flashes.

- 6 Press ● START, then start playing the desired source to record.**

Recording starts.

To stop recording

Press ■.

Notes

- You cannot listen to other sources while recording.
- If no sound is being recorded when recording from a DVD, set “Dolby Digital” or “DTS” to “PCM” under “AV” in the Setup Display.
- The sound effect automatically switches to “FLAT” in step 5.

Tips

- When you record on both sides, be sure to start from the front side. If you start from the reverse side, recording stops at the end of the reverse side.
- For recording from the tuner:
If noise is heard while recording from the tuner, move the respective antenna to reduce the noise.

Sound Adjustment

Selecting the sound effect

Press **PRESET EQ** repeatedly to select the preset you desire.

The preset name appears in the display.

To cancel the sound effect

Press **PRESET EQ** repeatedly until “FLAT” appears in the display.

Sound effect options

EQ	Effect
ROCK	Bass and treble are greatly boosted. This gives rock and dance music tracks even more powerful sound.
JAZZ	Bass and treble are somewhat boosted. This makes live instrumental performances such as jazz or other small ensembles sparkle without losing the natural tones of the instruments.
CLASSIC	Unwanted treble is attenuated, letting you enjoy music with a relaxed feeling. This mode is suitable for orchestra, piano solos and other classical music.
HALL	Expansive, reverberating sounds are artificially reproduced. This lets you enjoy natural expansive sound and reverberations such as inside a large theater or a chapel.
LIVE	Bass and treble are boosted, and reverberating sounds are artificially reproduced. This lets you enjoy expansive, dazzling and powerful sounds such as in a concert hall.
MOVIE	Expansive, reverberating sounds are artificially reproduced and the bass is also boosted. This lets you enjoy movies with a full sound-space feeling like being in a movie theater.

Singing along: Karaoke

You can sing along by turning down the singer's voice. You need to connect an optional microphone.

Enjoying Karaoke

- 1 Press **MIC LEVEL** – repeatedly until “MIC OFF” appears.
- 2 Connect an optional microphone to **MIC jack**.
- 3 Press **KARAOKE PON** repeatedly until “KARA PON” appears.


To sing karaoke of multiplex CD, press **AUDIO** repeatedly during play to select “Left” or “Right” (see “Changing the sound (Except for JPEG)” on page 18).

- 4 Start playing the music.
- 5 Press **MIC LEVEL + or –** repeatedly to adjust the microphone volume.

Each time you press the button, the display changes cyclically as follows:

MIC OFF ↔ MIC 1 ↔ MIC 2
↔ ... ↔ MIC 7

Other operations

To	Do this
Use VIDEO CDs or DVDs	Turn on your TV and switch it to the appropriate video input.
Cancel karaoke mode	Press MIC LEVEL – repeatedly until “MIC OFF” appears and disconnect the microphone from MIC jack , then press KARAOKE PON repeatedly until “  ” disappears.
Adjust the microphone echo	Press ECHO repeatedly to adjust the echo effect. To cancel the echoing, press ECHO repeatedly until “ECHO OFF” appears.

Notes

- The instrumental sound may be reduced as well as the singer's voice when the sound is recorded in monaural.
- The singer's voice may not be reduced when:
 - only a few instruments are playing.
 - a duet is being played.
 - the source has strong echoes or chorus.
 - the singer's voice deviates from the center.
 - the voice on the source is singing in high soprano or tenor.
- Karaoke mode is canceled when:
 - you change the disc.
 - you change the function.
 However, the microphone volume will not be changed.
- With some songs, vocals may not be canceled when you select "KARA PON".
- KARAOKE PON is not available during recording.

Tip

To adjust the microphone volume or echo on the unit, press MIC/ECHO on the unit repeatedly until "MIC X" (for microphone volume) or "ECHO X" (for microphone echo) appears, then press ◀◀ or ▶▶ repeatedly.

Mixing and recording sounds

You can "mix" sounds by playing one of the components and singing or speaking into a microphone (not supplied).

The mixed sound can be recorded on a tape. Use buttons on the unit for the operation.

- 1 Prepare the source you want to mix.**
- 2 Load a recordable tape.**
- 3 Press DIRECTION repeatedly to select "↔" to record on one side. Select "↔" or "↔" to record on both sides.**
- 4 Press TAPE ◀▶ repeatedly to select recording side, then press ■.**

If you select both sides recording or front side recording, press TAPE ◀▶ to light up the ▶ indicator, then press ■. If you record on the reverse side, press TAPE ◀▶ again to light up the ◀ indicator, then press ■.

- 5 Press the function button of the source you want to record (e.g., DVD ▶).**

When you want to record from a disc, press ■ twice to stop playback.

- 6 Press ● START.**

The tape deck stands by for recording. "REC" flashes.

- 7 Press ● START, and then start singing, speaking or playing the desired source.**

Recording starts.

To stop recording

Press ■.

Tips

- If acoustic feedback (howling) occurs, move the microphone away from the speakers or change the direction of the microphone.
- If you want to record your voice through the microphone only, you can do so by selecting the DVD function when a disc is load and not playing a disc.

Timer

Falling asleep to music

— Sleep Timer

You can set the system to turn off after a certain time, so that you can fall asleep to music.

Press SLEEP.

Each time you press the button, the minute display (the turn-off time) changes cyclically as follows:

AUTO* → 90 → 80 → 70 → ... → 10 → OFF

* The system automatically turns off in 100 minutes or after the current disc or tape finishes playing.

Other operations

To	Press
Check the remaining time*	SLEEP once.
Change the time to turn off	SLEEP repeatedly to select the time you want.
Cancel the Sleep Timer Function	SLEEP repeatedly until "SLEEP OFF" appears.

* You cannot check the remaining time if you select "AUTO".

Note

Do not set to "AUTO" during Synchro Recording on a tape.

Tip

You can use the Sleep Timer, even if you have not set the clock.

Waking up to music

— Play Timer

You can wake up to music at a preset time. Make sure you have set the clock (see "Setting the clock" on page 10).

Use buttons on the remote for the operation.

1 Prepare the sound source you want to play.

- DVD: Load a disc.
- Tape: Load a tape.
- Tuner: Tune in the preset radio station (see "Listening to the radio" on page 25).

2 Press CLOCK/TIMER SET.

3 Press ◀◀ or ▶▶ repeatedly to select "PLAY SET", then press ENTER.

"ON" appears and the hour indication flashes.

4 Set the time to start playing.

Press ◀◀ or ▶▶ repeatedly to set the hour, then press ENTER.

The minute indication flashes.

Press ◀◀ or ▶▶ repeatedly to set the minute, then press ENTER.

5 Set the time to stop playing following the same procedure as step 5.

6 Press ◀◀ or ▶▶ repeatedly until the desired sound source appears.

Each time you press the button, the display changes cyclically as follows:



7 Press ENTER.

The type of timer ("PLAY TIMER"), the start time, the stop time, and the sound source appear in turn, before the original display returns.

8 Press VOLUME + or – to adjust the volume.

9 Press I/⏻ to turn off the system.

Other operations

To	Do this
Check the setting	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀▶ or ▶▶ repeatedly until “PLAY SELECT” appears, then press ENTER.
Change the setting	Start over from step 1.
Cancel the timer	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀▶ or ▶▶ repeatedly until “TIMER OFF” appears, then press ENTER.

Notes

- You cannot activate the Play Timer and Rec Timer at the same time.
- If you use the Play Timer and the Sleep Timer at the same time, the setting with the earlier end time has priority.
- The system turns on 15 seconds before the preset time. Do not operate the system from the time the system turns on until the play starts.
- If the system is on 15 seconds before the preset time, the Play Timer will not be activated.
- You cannot use the optional component connected to MD IN L/R jacks as the sound source for Play Timer.

Timer recording radio programs

— Rec Timer

You can record a preset radio station from a specified time.

To timer record, you must first preset the radio station (see “Presetting radio stations” on page 24) and set the clock (see “Setting the clock” on page 10).

Use buttons on the remote for the operation.

- 1 Press CLOCK/TIMER SET.**
- 2 Press **◀▶** or **▶▶** repeatedly to select “REC SET”, then press ENTER.**
“ON” appears and the hour indication flashes.
- 3 Set the time to start recording.**
Press **◀▶** or **▶▶** repeatedly to set the hour, then press ENTER.
The minute indication flashes.
Press **◀▶** or **▶▶** repeatedly to set the minute, then press ENTER.
- 4 Set the time to stop recording following the same procedure as step 4.**
The type of timer (“REC TIMER”), the start time, the stop time, and “TUNER REC” appear in turn, before the original display returns.
- 5 Load a recordable tape.**
- 6 Press DIRECTION on the unit repeatedly to select “→” to record on one side. Select “↔” or “←” to record on both sides.**
- 7 Press TAPE **◀▶** repeatedly to select recording side, then press **■**.**
If you select both sides recording or front side recording, press TAPE **◀▶** to light up the **▶** indicator, then press **■**. If you record on the reverse side, press TAPE **◀▶** again to light up the **◀** indicator, then press **■**.
- 8 Tune in the preset radio station (see “Listening to a preset station” on page 25).**

continued

9 Press I/⏻ to turn off the system.

Other operations

To	Do this
Check the setting	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀◀ or ▶▶ repeatedly until “REC SELECT” appears, then press ENTER.
Change the setting	Start over from step 1.
Cancel the timer	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀◀ or ▶▶ repeatedly until “TIMER OFF” appears, then press ENTER.

Notes

- You cannot activate the Play Timer and Rec Timer at the same time.
- If you use the Rec Timer and the Sleep Timer at the same time, the setting with the earlier end time has priority.
- The system turns on 15 seconds before the preset time. Do not operate the system from the time the system turns on until the play starts.
- If the system is on 15 seconds before the preset time, the Rec Timer will not be activated.
- The volume is reduced to minimum during recording.
- Note that if the Rec Timer is set at the same time as the Play Timer sound source is set to tape, the Rec Timer sound may be recorded onto the tape.

Display

Turning off the display

— Power Saving Mode

The clock display can be turned off to minimize the amount of power consumed during standby (Power Saving Mode).

Press DISPLAY repeatedly while the system is off until the clock display disappears.

To cancel Power Saving Mode

Press DISPLAY while the system is off. Each time you press the button, the display switches as follows:

Clock display* ↔ No display (Power Saving Mode)

* The clock is displayed only if you set the clock.

Tips

- The timer continues to operate in Power Saving Mode.
- I/⏻ indicator lights up even in Power Saving Mode.

Adjusting the brightness of the indicators

Press DIMMER repeatedly.

Each time you press the button, the setting changes cyclically as follows:

DIMMER OFF → DIMMER 1 → DIMMER 2*

* DIMMER 2 is the darkest.

Viewing information about the disc in the display

You can check the playing time and remaining time of the current track or that of the disc.

Checking the disc information (DVD/VIDEO CD/CD/MP3/JPEG)

Press DISPLAY.

Each time you press the button, the display changes cyclically as follows:

■ When playing a DVD

Elapsed playing time of the current title →
Remaining time of the current chapter →
Remaining time of the current title → Clock display (for a few seconds) → Effect status (for a few seconds)

■ When playing a CD/VIDEO CD without PBC function

Elapsed playing time of the current track →
Remaining time of the current track →
Remaining time of the disc¹ → Clock display (for a few seconds) → Effect status (for a few seconds)

■ When playing a VIDEO CD with PBC functions (Ver. 2.0)

Elapsed playing time on the current track² →
Clock display (for a few seconds) → Effect status (for a few seconds)

■ When playing an MP3

Elapsed playing time of the current track →
Clock display (for a few seconds) → Effect status (for a few seconds)

■ When playing a JPEG

Current file number → Clock display (for a few seconds) → Effect status (for a few seconds)

■ When you press DISPLAY in stop mode

Total title/track number of the disc and total playing time of the current disc³⁾ → Clock display (for a few seconds) → Effect status (for a few seconds)

- ¹⁾ These are not displayed during Shuffle Play or Program Play.
- ²⁾ May not appear with still images.
- ³⁾ VIDEO CDs and CDs only

Checking the tuner information (TUNER)

Press DISPLAY while listening to the radio.

Each time you press the button, the display changes cyclically as follows:

Preset number* and frequency → Clock display (for a few seconds) → Effect status (for a few seconds)

* Preset number is displayed only if you preset radio stations (page 24).

Viewing information about the disc in the on-screen display

You can check the playing time and remaining time of the current title, chapter or track.

Press DISPLAY.

Each time you press the button, the display changes cyclically as follows:

■ When playing a DVD

Elapsed playing time of the current title →
Remaining time of the current chapter →
Remaining time of the current title

■ When playing a VIDEO CD

Elapsed playing time of the current track →
Remaining time of the current track*

■ When playing a CD

Elapsed playing time of the current track →
Remaining time of the current track →
Remaining time of the current disc

■ When playing an MP3

Elapsed playing time of the current track

■ When playing a JPEG

Current file number and total number of files

* When playing a VIDEO CD without PBC function


To turn off the display

Press DISPLAY repeatedly until the display disappears.

Optional Components

Hooking up optional components

To enhance your system, you can connect optional components. Refer to the operating instructions provided with each component.

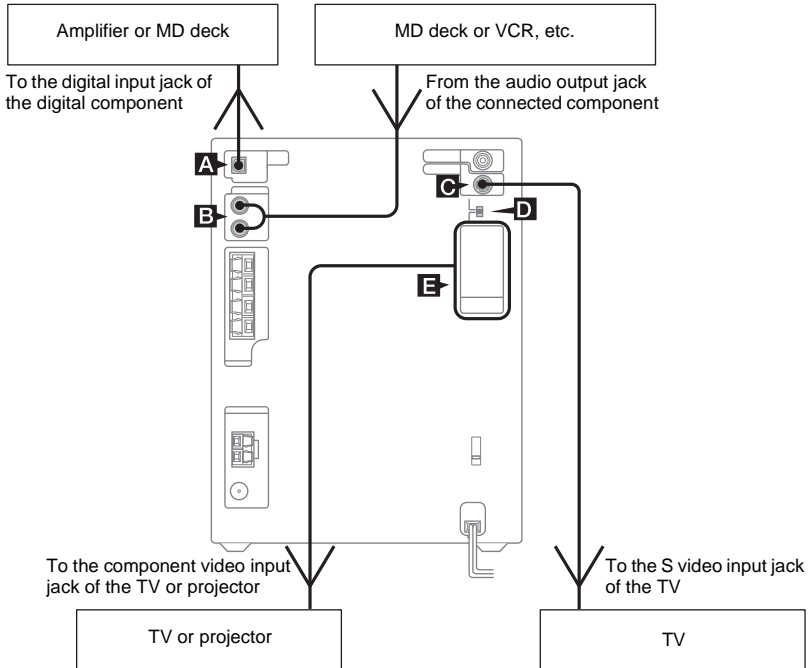

A DIGITAL OUT (OPTICAL) jack

Use a digital optical cord (square, not supplied) to connect an amplifier, MD deck or DAT deck with a digital optical input jack. Sound is then output when the system function is set to DVD. By connecting this system to the optical input jack of the optional amplifier equipped with Dolby Digital or DTS decoder, you can enjoy the 5.1 channel sound.

In addition, when the CD or DVD audio is linear PCM, you can make a digital recording from this system to an MD deck or DAT deck.

Notes

- When playing a VIDEO CD or MP3 audio tracks, you cannot output digital audio.
- You can record digital audio from this system only when DVD function is selected.
- You cannot make a digital recording of a copy guarded disc using a digital component connected to this system. Also, playback may not be possible depending on the connected component.
- DVD linear PCM output is output at a sampling frequency of 48 kHz regardless of the disc being played back.
- When you connect a component that does not support Dolby Digital or DTS to the DIGITAL OUT (OPTICAL) jack and output a Dolby Digital or DTS bit stream, noise may be heard from the connected component.

B MD IN L/R jacks


Use audio cords (not supplied) to connect an optional analog component (MD deck or VCR, etc.) to these jacks. You can then record or listen to from the component through this system.

C S VIDEO OUT jack

Use an S video cord (not supplied) to connect an optional TV to this jack. Set VIDEO OUT SELECTOR to S VIDEO OUT while the system is off. You can enjoy higher quality video images.

D VIDEO OUT SELECTOR

Set VIDEO OUT SELECTOR depending on which jack is connected to the TV only while the system is off.

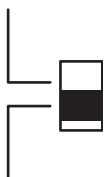

E ⇨ LINE-TV jack (for Russian model)

Use an optional SCART cord to connect a TV. Check that the TV conforms to RGB signals. If the TV conforms to RGB signals, change the input mode of the TV to RGB signals, then set VIDEO OUT SELECTOR on the unit to ⇨ LINE-TV while the system is off. Refer to the operating instructions supplied with the TV to be connected.

E COMPONENT VIDEO OUT jacks (for other models)

Use an optional component video cord to connect a TV. Set VIDEO OUT SELECTOR to COMPONENT VIDEO OUT while the system is off.

Listening to audio from a connected component

Use buttons on the unit for the operation.

1 Connect audio cords.

See “Hooking up optional components” on page 37.

2 Press MD to switch the function to MD.

Start playing the connected component.

Enjoying the 5.1 channel sound with the optional amplifier

- 1 Connect a digital optical cord.**
See “Hooking up optional components” on page 37.
- 2 Connect 6 speakers to an AV amplifier equipped with a decoder.**
For the speaker placement, refer to the operating instructions supplied with the connected amplifier.
- 3 Press DVD SETUP in stop mode.**
The Setup Display appears.
- 4 Press ← or → repeatedly to select “AV”, then press ENTER.**
- 5 Press ↑ or ↓ repeatedly to select “Dolby Digital” or “DTS”, then press ENTER.**
- 6 Press ↑ or ↓ repeatedly to select “Bit Stream”, then press ENTER.**
- 7 Press DVD SETUP to turn off the Setup Display.**
- 8 Switch the output to 5.1 channel Dolby Digital sound or 5.1 channel DTS sound.**
See “Changing the sound/subtitle/angle” on page 18.

Note

If “Dolby Digital” or “DTS” is set to “Bit Stream”, sound is not output from the supplied speakers and optional headphone does not function.

Recording audio from a connected component

- 1 Connect audio cords.**
See “Hooking up optional components” on page 37.
- 2 Start recording manually.**
See “Recording on a tape manually” on page 29.

Recording on a connected component

Making a digital recording on an MD

- 1 Connect a digital optical cord.**
See “Hooking up optional components” on page 37.
- 2 Press DVD ► (or DVD ►|| on the unit) to switch the function to DVD.**
- 3 Press ■ twice to stop playback.**
- 4 Start recording with the connected digital component (MD deck, etc.)**
Refer to the operating instructions provided with the connected component.
- 5 Press DVD ► (or DVD ►|| on the unit) to start playing.**

Notes

- You cannot make a digital recording in the following cases.
 - Copy guarded DVDs
 - DVD Dolby Digital or DTS bit stream output
 - CD-Rs/CD-RWs* recorded in music CD format
 - You cannot make a recording when “Dolby Digital” or “DTS” under “AV” is set to “Bit Stream”. Set “Dolby Digital” and “DTS” to “PCM”.
- * Playback is possible on a connected digital component.

Troubleshooting

Problems and remedies

Should you encounter a problem with your system, do the following:

- 1 Make sure the power cord and speaker cords are correctly and firmly connected.
- 2 Find your problem in the troubleshooting checklist below and take the indicated corrective action.

If the problem persists after doing all of the above, consult your nearest Sony dealer.

When the I/Ⓞ indicator flashes

Immediately unplug the power cord and check the following items.

- If your system has a voltage selector, is the voltage selector set to the correct voltage? Check the voltage for your region, then make sure the voltage selector is set correctly.
- Are the + and – speaker cords short-circuited?
- Are you using the supplied speakers?
- Is anything blocking the ventilation holes on the rear of the system?

Check all the above items and fix any problems found. After I/Ⓞ indicator stops flashing, reconnect the power cord and turn on the system. If the indicator still flashes, or if the cause of the problem cannot be found even after checking all the above items, consult your nearest Sony dealer.

General

“– -:– –” appears in the display.

- A power interruption has occurred. Set the clock (page 10) and timer settings (pages 32 and 33) again.

The clock setting/radio presetting/timer is canceled.

- Redo the following:
 - “Setting the clock” (page 10)
 - “Presetting radio stations” (page 24)
 - “Falling asleep to music” and “Waking up to music” (page 32)
 - “Timer recording radio programs” (page 33)

There is no sound.

- Press VOLUME +.
- Make sure the headphones are not connected.
- Check the speaker connections (page 7).
- There is no audio output during Rec Timer.
- The system is in pause mode or in slow-motion play mode. Press DVD ► or DVD ►|| on the unit to return to Normal Play.
- Set “Dolby Digital” or “DTS” under “AV” to “PCM”.

There is severe hum or noise.

- Move the system away from the source of noise.
- Connect the system to a different wall outlet.
- Install a noise filter (commercially available) to the power cord.

The timer cannot be set.

- Set the clock again (page 10).

The timer does not function.

- Check the timer setting and set the correct time (pages 32 and 33).
- Cancel the Sleep Timer Function (page 32).

The remote does not function.

- Remove the obstacle.
- Move the remote closer to the system.
- Point the remote at the system’s sensor.
- Replace the batteries (R6/size AA).
- Locate the system away from the fluorescent light.

There is acoustic feedback.

- Reduce the volume.
- Move the microphone away from the speakers or change the direction of the microphone.

The color irregularity on a TV screen persists.

- Turn off the TV set once, then turn it on after 15 to 30 minutes. If the color irregularity still persists, place the speakers farther away from the TV set.
-

Speakers

Sound comes from one channel or unbalanced left and right volume.

- Check the speaker connection and speaker placement.
 - The source being played back is monaural.
-

Sound lacks bass.


- Check that the speaker's + and – jacks are connected correctly.
-

DVD/VIDEO CD/CD/MP3/JPEG player



The disc tray does not open and “LOCKED” appears.

- Contact your Sony dealer or local authorized Sony service facility.
-

 

The disc tray does not close.

- Place the disc correctly.
 - Always close the tray by pressing  on the unit. Trying to press the tray closed with your fingers may cause problems with the player.
-

The disc does not eject.

- You cannot eject the disc during CD Synchro Recording. Press  to cancel the CD Synchro Recording, then press  on the unit to eject the disc.
 - Consult your nearest Sony dealer.
-


Play does not start.

- Open the disc tray and check whether a disc is loaded.
- Wipe the disc clean (page 46).
- Replace the disc.
- Place the disc that this system can play (page 5).
- Place the disc correctly.
- Place the disc in the tray with the label side up.
- Remove the disc and wipe away the moisture on the disc, then leave the system turned on for a few hours until the moisture evaporates.
- Press DVD  or DVD  on the unit to start play.
- The region code on the DVD does not match the system.

The sound skips.

- Wipe the disc clean (page 46).
 - Replace the disc.
 - Try moving the system to a place without vibration (e.g., on top of a stable stand).
 - Try moving the speakers away from the system, or placing them on separate stands. When you listen to a track with bass sounds at high volume, the speaker vibration may cause the sound to skip.
-

Play does not start from the first track.

- Press PLAY MODE repeatedly until both “PGM” and “SHUF” disappear to return to Normal Play.
 - Resume Play has been selected. Press  in stop mode, then start playback (page 12).
 - The title, DVD or PBC menu automatically appears on the TV screen.
-

Playback starts automatically.

- The DVD features an auto playback function.
-

Playback stops automatically.

- Some discs may contain an auto pause signal. While playing such a disc, the playback stops at the auto pause signal.
-

You cannot perform some functions such as Stop, Search, Slow-motion Play, Repeat Play, Shuffle Play or Program Play.

- Depending on the disc, you may not be able to do some of the operations above. Refer to the operating instructions supplied with the disc.
-

MP3 audio track cannot be played back.

- Recording was not performed according to the ISO9660 level 1 or level 2 format, or Joliet in the expansion format.
 - The MP3 audio track does not have the extension “.MP3”.
 - The data is not stored in MP3 format.
 - Discs containing files other than MPEG1 Audio Layer-3 files cannot be played.
 - Set “Data CD Priority” under “AV” to “MP3” (page 20).
 - Playback is possible up to 15 levels.
 - The album contains more than 999 MP3 audio tracks.
-

MP3 audio tracks take longer to play back than others.

- After the system reads all tracks on the discs, playback may take more time than usual if:
 - the number of albums or tracks on the disc is very large.
 - the album and track organization structure is very complex.

continued

The JPEG image file cannot be played.

- The DATA CD is not recorded in JPEG format that conforms to ISO9660 Level 1/Level 2 or Joliet.
- The JPEG image file does not have the extension “.JPG” or “.JPEG”.
- The data is not formatted in JPEG even though it has the extension “.JPG” or “.JPEG”.
- Set “Data CD Priority” under “AV” to “JPEG” (page 20).
- Playback is possible up to 15 levels.
- The album contains more than 999 JPEG image files.

The sound loses stereo effect when you play a DVD, VIDEO CD, CD or MP3.

- Select “KARA OFF” in step 3 of “Singing along: Karaoke” (page 30).
- Make sure the system is connected appropriately.

The recording was not done properly when making a digital recording from the CD/DVD player of this system to an optional component connected to the DIGITAL OUT (OPTICAL) jack.

- Audio data is output from the DIGITAL OUT (OPTICAL) jack without any sound processing, so that the audio data is output slightly ahead of the sound from the speakers. Therefore, start the optional component recording in advance when making a digital recording to a connected optional component (MD deck, etc.).
-

Picture

There is no picture.

- Press DVD.
- Check that the system is connected securely.
- If video from this system has to go through your VCR to get to your TV, the copy-protection applied to some DVD programs could affect picture quality. If you still experience problems after checking your connections, please try connecting this system directly to your TV’s S-video-input, if your TV is equipped with this input, then set VIDEO OUT SELECTOR to S VIDEO OUT while the system is off (page 8).
- The video cable is damaged. Replace it with a new one.
- Make sure you connect the system to the video input jack of your TV (page 8).
- Make sure you turn on the TV and operate the TV correctly.
- Make sure you select the video input on the TV so that you can view the pictures from the system.
- When you play a VIDEO CD, make sure you set the color system correctly, according to your TV (color) system (except for Russian model).
- Make sure you connect the system and your TV using only the supplied video cable so that you can view game images.

Picture noise appears.

- Clean the disc.
- When you play a VIDEO CD, the color system is different. Set the color system to match your TV (page 20) (except for Russian model).

The aspect ratio of the screen cannot be changed even though you set “TV Type” under “AV” in the Setup Display when you play a wide picture.

- The aspect ratio is fixed on your DVD.
- If you connect the system with the S video cable, connect directly to the TV. Otherwise, you may not change the aspect ratio.
- Depending on the TV, you may not change the aspect ratio.

Messages do not appear on the screen in the language you want.

- Select the language you want for the on-screen display in “OSD” under “Language” in the Setup Display (page 19).

The language for the sound track cannot be changed.

- Multilingual tracks are not recorded on the DVD being played.
- The DVD prohibits changing the language for the sound track.

The subtitle language cannot be changed.

- Multilingual subtitles are not recorded on the DVD being played.
- The DVD prohibits changing the subtitles.

The subtitle cannot be turned off.

- The DVD prohibits turning off subtitles.

The angles cannot be changed.

- Multi-angles are not recorded on the DVD being played.
 - The DVD prohibits changing the angles.
-

Tuner

Severe hum or noise/stations cannot be received. (“TUNED” or “STEREO” flashes in the display)

- Set the proper band and frequency (page 24).
- Connect the antenna properly (page 7).
- Find a place and an orientation that provide good reception, then set up the antenna again. If you cannot obtain good reception, we recommend you connect a commercially available external antenna.
- The supplied FM lead antenna receives signals along its entire length, so make sure you extend it fully.
- Locate the antennas as far away from the speaker cords as possible.
- Consult your nearest Sony dealer if the supplied AM antenna has come off the plastic stand.
- Try turning off surrounding electrical equipment.

A stereo FM program cannot be received in stereo.

- Press FM MODE until “MONO” disappears.
-

Tape deck

The tape does not record or play, or there is a decrease in sound level.

- The heads are dirty. Clean them (page 46).
- The record/playback heads are magnetized. Demagnetize them (page 46).

The tape does not erase completely.

- The record/playback heads are magnetized. Demagnetize them (page 46).

There is excessive wow or flutter, or the sound drops out.

- The capstans or pinch rollers are dirty. Clean them (page 46).

Noise increases or the high frequencies are erased.

- The record/playback heads are magnetized. Demagnetize them (page 46).

The tape does not record.

- No cassette is loaded. Load a cassette.
- The tab has been removed from the cassette. Cover the broken tab with adhesive tape (page 46).
- The tape has wound to the end.
- Set “Dolby Digital” or “DTS” under “AV” to “PCM”.

“TAPE ERR” appears in the display.

- Press I/⏻ to turn off the system and remove any tapes from the cassette holder. Then disconnect the power cord and reconnect it. Then press I/⏻ to turn on the system.
If “TAPE ERR” still appears, consult your nearest Sony dealer.
-

Optional components

There is no sound.

- Refer to General item “There is no sound.” (page 40) and check the condition of the system.
 - Connect the component properly (page 37) while checking:
 - if the cords are connected properly.
 - if the cord plugs are firmly inserted all the way.
 - Turn on the connected component.
 - Refer to the operating instructions supplied with the connected component and start playing.
-

If the system still does not operate properly after performing the above measures, reset the system as follows:

Use buttons on the unit for the operation.

- 1 Disconnect the power cord.
- 2 Reconnect the power cord.
- 3 Press **■**, **DIRECTION** and **DVD ►||** at the same time.
- 4 Press **I/⏻** to turn on the system.

The system is reset to the factory settings except for DVD settings. You should set the settings you made, such as the preset stations, clock, and timer.

To return the DVD setup to the default settings*, perform reset as follows:

The operation can only be set using the TV screen.

- 1 Press **DVD SETUP** in stop mode.
- 2 Press **←** or **→** repeatedly to select "Reset", then press **ENTER**.
- 3 Press **←** or **→** repeatedly to select "YES", then press **ENTER**.
It takes a few seconds to complete. Do not press **I/⏻** when resetting the system.

* Except for Rating (Parental Control) settings

Messages

One of the following messages may appear or flash in the display during operation.

DVD/VIDEO CD/CD/MP3/JPEG

CAN'T PLAY

- A disc that cannot be played was inserted.
 - A disc with an unsupported Region code was inserted.
-

NO DISC

There is no disc in the unit.

NOT IN USE

You pressed an invalid button.

Tape

NO TAB

You cannot record the tape because the tab has been removed from the cassette.

NO TAPE

There is no tape in the tape deck.

TAPE ERR

A malfunction of the tape deck has occurred.

Additional Information

Precautions

On operating voltage

Before operating the system, check that the operating voltage of your system is identical with the voltage of your local power supply.

On safety

- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the system from the wall outlet (mains) if it is not to be used for an extended period of time. To disconnect the power cord (mains lead), pull it out by the plug. Never pull the cord itself.
- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- AC power cord must be changed only at the qualified service shop.

On placement

- Do not place the system in an inclined position.
- Do not place the system in locations where it is;
 - Extremely hot or cold
 - Dusty or dirty
 - Very humid
 - Subject to vibrations
 - Subject to direct sunlight.
- Use caution when placing the unit or speakers on surfaces that have been specially treated (with wax, oil, polish, etc.) as staining or discoloration of the surface may result.

On heat buildup

- Although the system heats up during operation, this is not a malfunction.
- Place the system in a location with adequate ventilation to prevent heat buildup in the system.
- If you continuously use this system at a high volume, the cabinet temperature of the top, side and bottom rises considerably. To avoid burning yourself, do not touch the cabinet.
- To prevent a malfunction, do not cover the ventilation hole for the cooling fan.

In case color irregularity is observed on nearby a TV screen

With the magnetically shielded type of speaker system, the speakers can be installed near a TV set. However, color irregularity may still be observed on the TV screen depending on the type of your TV set.

If color irregularity is observed...

Turn off the TV set once, then turn it on after 15 to 30 minutes.

If color irregularity is observed again...

Place the speakers farther away from the TV set.

IMPORTANT NOTICE

Caution: This system is capable of holding a still video image or on-screen display image on your television screen indefinitely. If you leave the still video image or on-screen display image displayed on your TV for an extended period of time you risk permanent damage to your television screen. Projection televisions are especially susceptible to this.

On operation

- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD/DVD player. Should this occur, the system will not operate properly. Remove the disc and leave the system turned on for about an hour until the moisture evaporates.
- When you move the system, take out any disc.

If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

Notes on discs


- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.
- Do not use solvents such as benzene, thinner, commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.
- Do not use discs encircled with a protection ring. This may cause a malfunction to the system.
- When using discs that have glue or similar tacky substance on the label side of the disc or that used a special ink when the label was printed, there is a chance that the disc or label may become attached to parts inside this unit. When this occurs, it may not be possible to remove the disc, and may also cause this unit to malfunction. Be sure to check that the label side of the disc is not sticky before using.
The following types of disc should not be used:
 - Rental or used discs with attached seals where the glue extends beyond the seal. The perimeter of the seal on the disc is tacky.
 - Discs that have labels printed using a special ink that feels tacky when touched.

Cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as thinner, benzene or alcohol.

To save a tape permanently

To prevent a tape from being accidentally recorded over, break off the cassette tab from side A or B as illustrated.

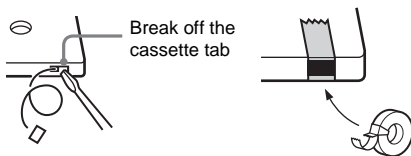

If you later want to reuse the tape for recording, cover the broken tab with adhesive tape.

Before placing a cassette in the tape deck

Take up any slack in the tape. Otherwise, the tape may get entangled in the parts of the tape deck and become damaged.

When using a tape longer than 90 minutes

The tape is very elastic. Do not change the tape operations such as play, stop, and fast-winding frequently. The tape may get entangled in the tape deck.

Cleaning the tape heads

Clean the tape heads after every 10 hours of use. Be sure to clean the tape heads before you start an important recording or after playing an old tape. Use a separately sold dry-type or wet-type cleaning cassette. For details, refer to the instructions of the cleaning cassette.

Demagnetizing the tape heads

Demagnetize the tape heads and the metal parts that have contact with the tape after every 20 to 30 hours of use with a separately sold demagnetizing cassette. For details, refer to the instructions of the demagnetizing cassette.

Specifications

Main unit (HCD-GP8D)

Amplifier section

Russian model

The following measured at AC 230 V, 50/60 Hz
DIN power output (rated) 30 + 30 watts
(6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference)
40 + 40 watts
(6 ohms at 1 kHz, 10% THD)

Other models

The following measured at AC 240 V, 50/60 Hz
DIN power output (rated) 30 + 30 watts
(6 ohms at 1 kHz, DIN)
Continuous RMS power output (reference)
40 + 40 watts
(6 ohms at 1 kHz, 10% THD)

Inputs

MD IN (phono jacks): voltage 1 V, impedance
47 kilohms
MIC (phone jack): sensitivity 1 mV,
impedance 10 kilohms

Outputs

VIDEO OUT (phono jack):
max. output level
1 V_{p-p}, unbalanced, Sync
negative, load impedance
75 ohms

S VIDEO OUT (4-pin/mini-DIN jack):
Y: 1 V_{p-p}, unbalanced,
Sync negative,
C: 0.286 V_{p-p} for NTSC,
load impedance 75 ohms
0.3 V_{p-p} for PAL, load
impedance 75 ohms

LINE-TV (for Russian model):
max. output level 1 V_{p-p},
unbalanced, Sync
negative, load impedance
75 ohms

COMPONENT VIDEO OUT (for other models):
Y: 1 V_{p-p}, 75 ohms
Cb, Cr: 0.7 V_{p-p}, 75 ohms

DIGITAL OUT (OPTICAL) (Square optical connector
jack, rear panel)

Wavelength 660 nm

PHONES (stereo mini jack):
accepts headphones of
8 ohms or more

SPEAKER:
accepts impedance of
6 ohms

Disc player section

System Compact disc and digital
audio and video system
Laser Semiconductor laser
(DVD: $\lambda=650$ nm,
CD: $\lambda=780$ nm)
Emission duration:
continuous
Frequency response DVD (PCM 48 kHz):
2 Hz – 22 kHz (± 1 dB)
CD: 2 Hz – 20 kHz (± 1 dB)
Video color system format
Russian model: PAL
Other models: NTSC, PAL

Tape deck section

Recording system 4-track 2-channel stereo
Frequency response 40 – 13,000 Hz,
using Sony TYPE I
cassette
Wow and flutter $\pm 0.15\%$ W.Peak (IEC)
0.1% W.RMS (NAB)
 $\pm 0.2\%$ W.Peak (DIN)

Tuner section

FM stereo, FM/AM superheterodyne tuner
FM tuner section
Tuning range 87.5 – 108.0 MHz
(50-kHz step)
Antenna FM lead antenna
Antenna terminals 75 ohms unbalanced
Intermediate frequency 10.7 MHz
AM tuner section
Tuning range
Russian model: 531 – 1,602 kHz
(with the interval set at
9 kHz)
Other models: 530 – 1,710 kHz
(with the interval set at
10 kHz)
531 – 1,602 kHz
(with the interval set at
9 kHz)
Antenna AM loop antenna
Antenna terminals External antenna terminal
Intermediate frequency 450 kHz

Speaker (SS-CGP8D)

Speaker system	2-way, bass-reflex type, Built in sub woofer, magnetically shielded type
Speaker units	
Woofer:	12 cm, cone type
Sub woofer:	15 cm, cone type
Tweeter:	2.5 cm, Balance Dome type
Nominal impedance	6 ohms
Dimensions (w/h/d)	Approx. 183 × 295 × 295 mm
Mass	Approx. 4.7 kg net per speaker

General

Power requirements	
Russian model:	230 V AC, 50/60 Hz
Australian model:	230 – 240 V AC, 50/60 Hz
Hong Kong model:	220 – 240 V AC, 50/60 Hz
Other models:	110 – 120 V, 220 – 240 V AC, 50/60 Hz Adjustable with voltage selector
Power consumption	
Russian model:	90 watts 0.3 watts (in Power Saving mode)
Other models:	90 watts
Dimensions (w/h/d)	Approx. 191 × 250 × 312 mm
Mass	Approx. 6.2 kg
Supplied accessories:	Remote Commander (1) R6 (size AA) batteries (2) AM loop antenna (1) FM lead antenna (1) Video cable (1) Speaker pads (8)

Design and specifications are subject to change without notice.

Glossary

Album

Section of a music piece on a data CD containing MP3 audio tracks or JPEG image files.

Auto Pause

An automatic pauses according to the signal encoded on the disc while playing a VIDEO CD. If the CD/DVD player does not resume play for a long time, press DVD ► or DVD ►|| on the unit to resume play manually.

Chapter

Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

Dolby Digital

This sound format for movie theaters is more advanced than Dolby Surround Pro Logic. In this format, the surround speakers output stereo sound with an expanded frequency range and a subwoofer channel for deep bass is independently provided. This format is also called “5.1” because the subwoofer channel is counted as 0.1 channel (since it functions only when a deep bass effect is needed). All six channels in this format are recorded separately to realize superior channel separation. Furthermore, since all the signals are processed digitally, less signal degradation occurs.

DTS

Digital audio compression technology that the Digital Theater Systems, Inc. developed. This technology conforms to 5.1-channel surround. The surround channel is stereo and there is discrete sub woofer channel in this format. DTS provides the same 5.1 discrete channels of high quality digital audio. The good channel separation is realized because the all channel data is recorded discrete and processed in digital.

DVD

A disc that contains up to 8 hours of moving pictures even though its diameter is the same as a CD.

The data capacity of a single-layer and single-sided DVD, at 4.7 GB (Giga Byte), is 7 times that of a CD. Furthermore, the data capacity of a dual-layer and single-sided DVD is 8.5 GB, a single-layer and double-sided DVD 9.4 GB, and a dual-layer and double-sided DVD 17 GB.

The picture data uses the MPEG 2 format, one of the worldwide standards of digital compression technology. The picture data is compressed to about 1/40 of its original size. The DVD also uses the variable rate coding technology that changes the data to be allocated according to the status of the picture.

The audio data is recorded in Dolby Digital as well as in PCM, allowing you to enjoy more realistic audio presence.

Furthermore, various advanced functions such as the multi-angle, multilingual, and Parental Control functions are provided with the DVD.

File

Section of a picture on a data CD containing JPEG image files.

Film based software, Video based software

DVDs can be classified as Film based or Video based software. Film based DVDs contain the same images (24 frames per second) that are shown at movie theaters. Video based DVDs, such as television dramas or sit-coms, displays images at 30 frames (or 60 fields) per second.

Index (CD) / Video Index (VIDEO CD)

A number that divides a track into sections to easily locate the point you want on a VIDEO CD or a CD. Depending on the disc, no indexes may be recorded.

Menu Playback

Playback using the menu screens recorded on VIDEO CDs with PBC functions. You can enjoy simple interactive software using the menu playback function.

Multi-angle function

Various angles, or viewpoints of the video camera, for a scene are recorded on some DVDs.

Multilingual function

Several languages for the sound or subtitles in a picture are recorded on some DVDs.

Multi Session

This is a recording method that enables adding of data using the Track-At-Once method. Conventional CDs begin at a CD control area called the Lead-in and end at an area called Lead-out. A Multi Session CD is a CD having multiple sessions, with each segment from Lead-in to Lead-out regarded as a single session. CD-Extra: This format records audio (audio CD data) on the tracks in session 1 and data on the tracks in session 2.

Parental Control

A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country/region. The limitation varies from disc to disc; when it is activated, playback is completely prohibited, violent scenes are skipped or replaced with other scenes and so on.

Playback Control (PBC)

Signals encoded on VIDEO CDs (Version 2.0) to control playback. By using menu screens recorded on VIDEO CDs with PBC functions, you can enjoy playing simple interactive programs, programs with search functions, and so on.

This system conforms to Ver. 1.1 and Ver. 2.0 of VIDEO CD standards. You can enjoy two kinds of playback depending on the disc type.


VIDEO CDs without PBC functions (Ver. 1.1 discs)

Enjoy video playback (moving pictures) as well as music.

VIDEO CDs with PBC functions (Ver. 2.0 discs)

Play interactive software using menu screens displayed on the TV screen (PBC Playback), in addition to the video playback functions of Ver. 1.1 discs. Moreover, you can play high-resolution still pictures, if they are included on the disc.

Region Code

This system is used to protect copyrights. A region number is allocated on each DVD system or DVD disc according to the sales region. Each region code is shown on the system as well as on the disc packaging. The system can play the discs that match its region code. The system can also play discs with the “” mark. Even when the region code is not shown on the DVD, the region limit may still be activated.

Scene


On a VIDEO CD with PBC functions (page 14), the menu screens, moving pictures, and still pictures are divided into sections called “scenes”. Each scene is assigned a scene number enabling you to locate the scene you want.

Title

The longest sections of a picture or a music piece on a DVD; a movie, etc., for a picture piece on video software; or an album, etc., for a music piece on audio software. Each title is assigned a title number enabling you to locate the title you want.

Track

Sections of a picture or a music piece on a CD, VIDEO CD, MP3 or JPEG. Each track is assigned a track number enabling you to locate the track you want.

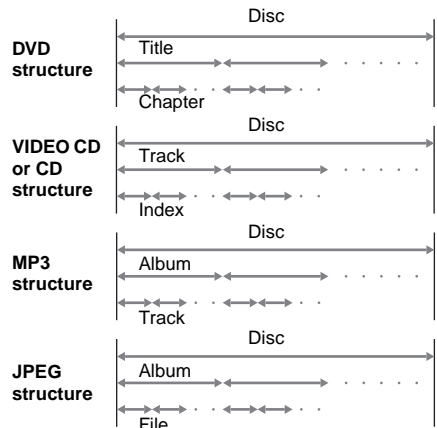

VIDEO CD

A compact disc that contains moving pictures. The picture data uses the MPEG 1 format, one of the worldwide standards for digital compression technology. The picture data is compressed to about 1/140 of its original size. Consequently, a 12 cm VIDEO CD can contain up to 74 minutes of moving pictures.

VIDEO CDs also contain compact audio data. Sounds outside the range of human hearing are compressed while the sounds we can hear are not compressed. VIDEO CDs can hold 6 times the audio information of conventional audio CDs.

There are 2 versions of VIDEO CDs.


- Version 1.1: You can play only moving pictures and sounds.
- Version 2.0: You can play high-resolution still pictures and enjoy PBC functions.

This system conforms to both versions.

List of button locations and reference pages

How to use this page

Use this page to find the location of buttons and other parts of the system that are mentioned in the text.

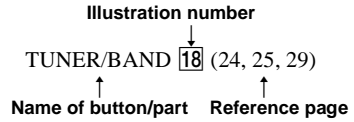

Main unit

ALPHABETICAL ORDER

A - L


- Cassette compartment 15 (27, 28, 31, 33)
- CD SYNC 13 (28)
- DIRECTION 9 (27, 28, 29, 31, 33, 44)
- Disc tray 4 (11)
- Display window 3

M - Z

- MD 18 (29, 38)
- MIC jack 16 (30)
- MIC/ECHO 11 (31)
- PHONES jack 17
- PRESET EQ 8 (30)
- Remote sensor 2
- TUNER/BAND 18 (24, 25, 29)
- TUNING +/- 6 (24, 26)
- VOLUME +/- 7 (12, 26, 27)

BUTTON DESCRIPTIONS

- I/⏻ (power) 1 (9, 44)
- ▲ (open/close) 5 (11)
- ◀▶ (rewind/fast forward) 6 (12, 27)
- ◀▶ (go back/forward) 6 (12, 31)
- ▲ PUSH (eject) 10 (27)
- (stop) 12 (9, 12, 25, 27, 28, 31, 39, 44)
- START (record) 14 (28, 31)
- DVD ▶▶ (play/pause) 19 (9, 11, 22, 28, 39, 44)
- TAPE ▶▶ (play) 19 (27, 28, 31)

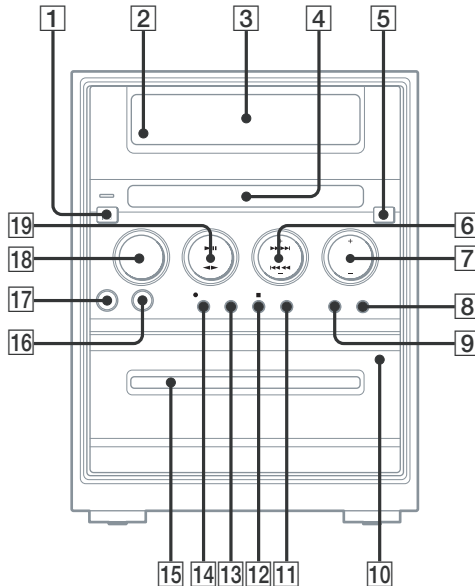

Remote control

ALPHABETICAL ORDER

A - J

- ANGLE **13** (19)
- AUDIO **13** (18, 30)
- CLEAR **21** (15, 16, 22)
- CLOCK/TIMER SELECT **12** (33, 34)
- CLOCK/TIMER SET **12** (10, 32, 33)
- DIMMER **8** (35)
- DISPLAY **10** (34, 35, 36)
- DVD MENU **10** (13, 14)
- DVD SETUP **10** (10, 19, 20, 21, 23, 39, 44)
- DVD TOP MENU **10** (13)
- ECHO **6** (30)
- ENTER **10** **14** (10, 13, 14, 16, 19, 20, 21, 24, 32, 33, 39, 44)
- FM MODE **18** (26)

K - Z

- KARAOKE PON **17** (30)
- MD **15**
- MIC LEVEL +/- **5** (30)
- MUTING **11** (12, 26, 27)
- Number buttons **22** (13, 14, 15, 16, 21)
- PLAY MODE **9** (12, 15)
- PRESET +/- **20** (24, 25)
- PRESET EQ **16** (30)
- REPEAT **19** (14)
- SLEEP **23** (32)
- SUBTITLE **13** (19)
- TIME SEARCH **2** (16)
- TUNER BAND **20** (24, 25)
- TUNER MEMORY **7** (24)
- TUNING +/- **20** (24, 26)
- VOLUME +/- **4** (12, 26, 27, 32)

BUTTON DESCRIPTIONS

- I/⏻ (power) **1** (9, 32, 44)
- ↺↻ RETURN **3** (14)
- ↑/↓/←/→ **10** (10, 12, 19, 39, 44)
- TAPE ◀▶ (play) **20** (27, 33)
- DVD ▶ (play) **20** (10, 11, 22, 39)
- ◀◀/▶▶ (go back/forward) **20** (10, 12, 32)
- (stop) **20** (9, 12, 27, 33, 39)
- ◀◀/▶▶ (rewind/fast forward) **20** (12, 27)
- ⏸ (pause) **20** (12)
- SLOW ▶▶ **20** (12)

