

# Radio Cassette Player

## Operating Instructions



©2003 Sony Corporation Printed in China

http://www.sony.net/

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.

WALKMAN is a trademark of Sony Corporation.


The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

### WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.


Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

### C

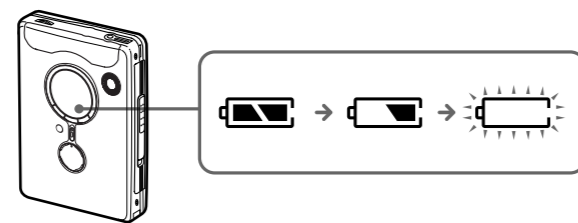

- To prevent fire, do not cover the ventilation of the apparatus with newspapers, table-cloths, curtains, etc. And don't place lighted candles on the apparatus.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.
- Do not use the unit while it is charging. Remove the unit from the charging stand when using it.
  - If you operate the unit while it is charging, the battery will not be charged.
  - If you operate the unit while it is charging, this may cause a malfunction.
- Do not place the unit on the charging stand without the rechargeable battery. Otherwise, this may cause a malfunction.

### D

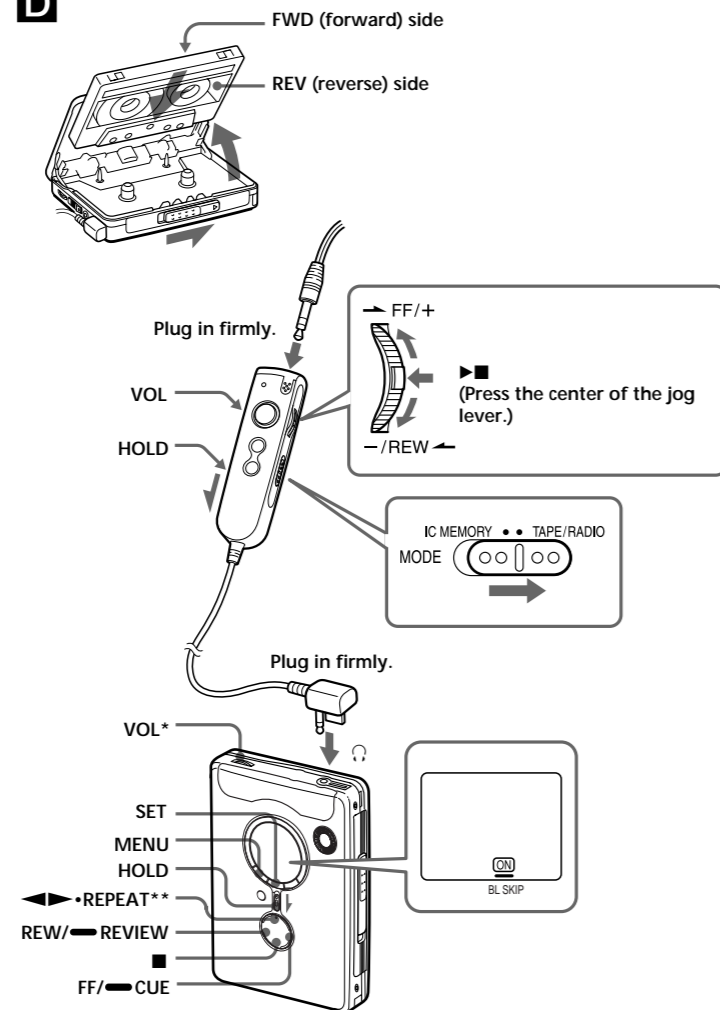

### Preparations

Prepare a dry battery (not supplied) or the rechargeable battery (supplied).

#### Dry Battery A

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity.

#### Note

For maximum performance we recommend that you use a Sony alkaline battery.

#### Rechargeable Battery B

Charge the rechargeable battery before using it for the first time.

- Insert the supplied rechargeable battery NH-14WM(A) into the rechargeable battery compartment with correct polarity.
- Connect the supplied AC power adaptor to the charging stand, plug in the AC power adaptor to the house current (mains).
- Place the main unit on the charging stand. The CHG lamp will light up during charging. Full charging takes about 6 hours regardless of the battery power remaining. The CHG lamp will go off when the battery is fully charged.

#### When to replace/charge the battery C

Replace or charge the battery when " " flashes in the display.

#### Battery life\* (Approx. hours)

Tape playback	50
Radio reception	56

#### Rechargeable battery NH-14WM (A)

Tape playback	30
Radio reception	34

#### Sony alkaline LR6 (SG)\*\* and Rechargeable NH-14WM (A)

Tape playback	80
Radio reception	90

\* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association). (Using a Sony HF series cassette tape)  
 \*\* When using a Sony LR6(SG) alkaline dry battery (produced in Japan).

#### Notes

- The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.
- The AVLS setting (see "Using the Menu") will be cancelled when you replace the battery.

#### Notes

- This charging stand charges the rechargeable battery based on a timer. If you remove the unit from the charging stand while it is charging, the timer will be reset and full charging will take about 6 hours when you place the unit on the charging stand again.
- You can use the unit before the CHG lamp goes off, but in that case, battery life will be shorter depending on the charging time.

This radio cassette player is supplied with a special IC memory function remote control. When playing a tape or listening to the radio, make sure that the MODE switch is set to TAPE/RADIO.

### Playing a Tape D

- Insert a cassette and if the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.
- Press ◀▶•REPEAT on the main unit and adjust the volume with VOL. (On the remote control, press ▶ (play) ■ (stop).)

When adjusting the volume on the remote control  
 Set the VOL control on the main unit to around 6.

When adjusting the volume on the main unit  
 Set the VOL control on the remote control at maximum.

#### Operation on the remote control

To	Jog lever
Switch playback to the other side	Press ▶■ for 2 seconds or more during playback
Stop playback	Press ▶■ once during playback
Repeat the current track (Repeat Single Track function)	Press ▶■ twice during playback <i>To stop a single repeat, press ▶■ once.</i>
Fast forward*	Move toward FF/+ during stop
Rewind*	Move toward -/REW during stop
Search forward during playback (CUE)	Move and hold toward FF/+ and release it at the point you want
Search backward during playback (REVIEW)	Move and hold toward -/REW and release it at the point you want
Play the next track/succeeding 9 tracks from the beginning (AMS**)	Move toward FF/+ once or repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS**)	Move toward -/REW once or repeatedly during playback

Play the other side from the beginning (Skip Reverse function)  
 Move and hold toward FF/+ for 2 seconds or more during stop

Play the same side from the beginning (Rewind Auto Play function)  
 Move and hold toward -/REW for 2 seconds or more during stop

#### Operation on the main unit

To	Select
Switch playback to the other side	◀▶•REPEAT during playback
Stop playback	■ (stop)
Repeat the current track (Repeat Single Track function)	◀▶•REPEAT for 2 seconds or more during playback <i>To stop a single repeat, press ▶ (play) ■ (stop).</i>
Fast forward*	FF/CUE during stop
Rewind*	REW/REVIEW during stop
Search forward during playback (CUE)	Press and hold FF/CUE and release it at the point you want
Search backward during playback (REVIEW)	Press and hold REW/REVIEW and release it at the point you want
Play the next track/succeeding 9 tracks from the beginning (AMS**)	FF/CUE once or repeatedly during playback
Play the current track/previous 8 tracks from the beginning (AMS**)	REW/REVIEW once or repeatedly during playback
Play the other side from the beginning (Skip Reverse function)	FF/CUE for 2 seconds or more during stop
Play the same side from the beginning (Rewind Auto Play function)	REW/REVIEW for 2 seconds or more during stop

\* Press ◀▶•REPEAT (on the remote control, press the jog lever) during fast forward or rewind to start playback.  
 \*\*Automatic Music Sensor.

#### To skip a long blank space (BL SKIP\* function)

- Press MENU repeatedly to set " " (the cursor) in the display to BL SKIP.
- Press SET to show " ".

\* When the BL SKIP function is on, the tape is fast-forwarded to the next track if there is a blank space longer than 12 seconds.

### Using the Menu E

#### Adjusting the Playback Modes

Press MENU repeatedly to set the cursor in the display to PB MODE. Then press SET to select the desired mode.

To play	Select
both sides repeatedly	↔
both sides once from the FWD side	↶

#### Emphasizing Sound

- Press MENU repeatedly to set the cursor in the display to SOUND.
- Press SET repeatedly to select the sound emphasis of your choice.

The indications change as follows:

- RV : Sound Revitalizer  
Emphasizes treble sound.
- MB : Mega Bass  
Emphasizes bass sound (moderate effect).
- GRV : Groove  
Emphasizes bass sound (strong effect).
- no message : normal (no effect)

#### Note

If the sound is distorted with the mode "GRV", turn down the volume of the main unit or select other modes.

#### Protecting Your Hearing — AVLS (Automatic Volume Limiter System)

The maximum volume is kept down to protect your ears. Press MENU repeatedly in the playback, stop or radio mode to set the cursor in the display to AVLS. Then press SET to show " ".

#### To cancel the AVLS function

Press SET so that " " disappears from the display.

### Using Other Functions E

#### Adjusting the Tape Playback Speed

You can adjust the playback speed using SPEED CONTROL. Turn SPEED CONTROL to:
 

- (slow) to play back at a slower speed.
- Center position to play back at normal speed.
- + (fast) to play back at a faster speed.

#### Locking the Controls — HOLD Function

Slide the HOLD switch in the direction of the arrow to lock the controls of the main unit (except SPEED CONTROL) or the remote control.

(turn over)

### E

