

SONY®

KD-28DL11U
KD-28DX51U
KD-32DC11U
KD-32DX51U

Quick Start Guide

Thank you for choosing this
**SONY® FD Trinitron Integrated
Digital Television**

This step by step guide will help you to:

Check the supplied accessories,

Insert batteries into the remote control,

Connect an aerial to the TV,

Connect a video cassette recorder (VCR) to the TV,

Switch on the TV,

Tune the TV,

Get to know the remote control.

DVB®
Digital Video
Broadcasting

**FD Trinitron
WEGA**

1


Checking the supplied accessories



Remote control






Batteries

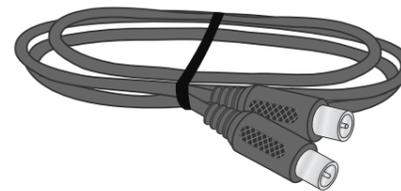

RF lead

2

Inserting batteries into the remote control

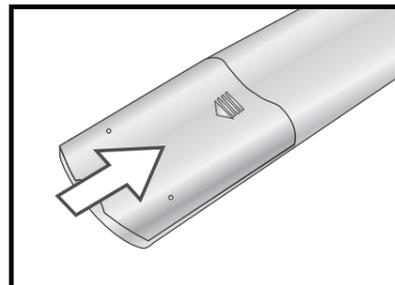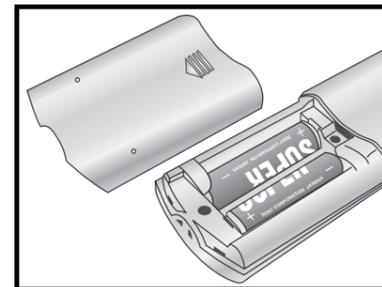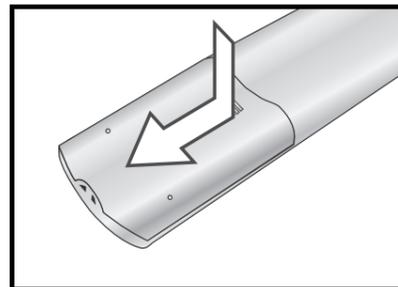


Always remember to:

- observe the correct polarity when inserting batteries,
- dispose of batteries in an environmentally friendly way.

3

Connecting an aerial and VCR to the TV

Rear of TV.

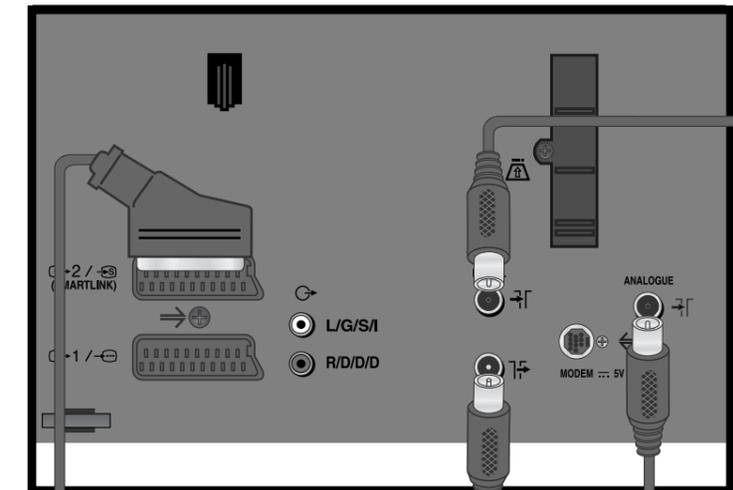

Supplied RF Lead

Rear of VCR

1. Connect your aerial lead to the socket labelled **DIGITAL** on the rear of the TV.
2. Connect an RF lead from the socket labelled **IN*** on your VCR.
3. Connect the supplied RF lead from the socket labelled **OUT*** on your VCR to the socket labelled **ANALOGUE** on the rear of the TV.
4. Connect a fully wired 21-pin scart lead from the socket labelled **2/3** on the rear of the TV to socket labelled **TV*** on your VCR.
5. Insert a pre-recorded tape into the VCR and press the 'PLAY' button. This enables the TV to locate and store the video channel during the 'Automatically tuning the TV' procedure.



*Socket names may vary depending on make and model of VCR. Refer to your VCR instruction manual for details.

**If your VCR does not have a scart socket follow the connecting instructions above ignoring the scart lead connection.

Connecting an aerial only

1. Connect your aerial lead to the socket labelled **DIGITAL** on the rear of the TV.
2. Connect the supplied RF lead from the sockets labelled **IN*** and **ANALOGUE** on the rear of the TV.

