

Cordless Stereo Headphone

Operating Instructions

Mode d'emploi

Manual de instrucciones

MDR-IF140

© 2003 Sony Corporation Printed in Malaysia



* 3 2 4 8 3 6 4 1 3 *

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

Owner's Record

The model number is located on the left inner side of the headband.

The serial number is located on the right inner side of the headband.

Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. MDR-IF140

Serial No. _____

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.



Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Welcome!

Thank you for purchasing the Sony MDR-IF140 Cordless Stereo Headphone. Before operating the unit, please read this manual thoroughly and retain it for future reference.

The MDR-IF140 is a cordless stereo headphone using infrared transmission. You can enjoy listening to a programme free from the restriction of the headphone cord by simply connecting the transmitter (optional) to a TV, or audio components equipped with a headphone jack or a line output jack.

- Cordless, noiseless infrared headphone resistant to external noise, etc.
- Self-adjusting headband mechanism eliminating the need for headband adjustment.
- Single VOL control adjusts both the right and left volume of the headphones.
- This unit can be used with the Sony cordless headphone system.

 
Use the MDR-140 with the optional transmitter.

The MDR-140 Headphone should be used with the Sony optional cordless stereo headphone system (except MDR-IF630RK).


▶ Getting started

Inserting the battery


- 1 Open the battery compartment lid of the left housing.

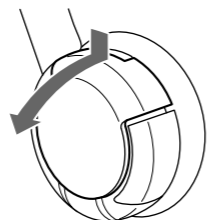

 - 2 Insert the size AAA dry battery into the battery compartment matching ⊕ terminal on the battery to ⊕ in the compartment.

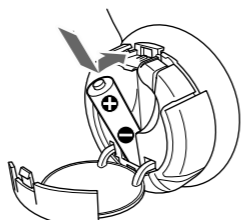

- 3 Close the battery compartment lid.

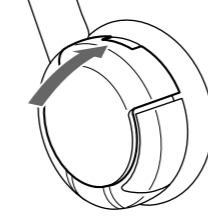 

Battery life

Battery	Approx. hours*1
Sony alkaline battery LR03/AM-4 (N)	60 hours*2
Sony manganese battery R03/UM-4 (NU)	28 hours*2

*1 at 1 kHz, 1 mW+1 mW output

*2 Time stated above may vary, depending on the temperature or conditions of use.

Notes on Battery

- Do not charge the dry battery.
- Do not carry the dry battery together with coins or other metallic objects. It can generate heat if the positive and negative terminals of the battery are accidentally come into contact with metallic objects.
- When you are not going to use the unit for a long time, remove the battery to avoid damage from battery leakage or corrosion.

When to replace the battery

When the battery becomes weak, the power indicator light dims, or sound becomes distorted or noisy. Replace the battery with new one as soon as possible.

▶ Operating the system

Listening to a program

Before listening

- Connect your AV component to the transmitter you use. See the operating instruction supplied with the transmitter for the connection and operation of the transmitter.
- To prevent your ears from being damaged, first lower the volume.

- 1 Turn on the audio/video component connected to the transmitter.

- 2 Turn on the headphones.

The power indicator on the upper part of the right housing glows red.



- 3 Put on the headphones.

Be sure to put the right housing (R) on your right ear and the left housing (L) on your left ear.

- 4 Start playback of the component connected to the transmitter.

- 5 Adjust the volume.

If the infrared sensors are covered by your hands when adjusting the volume, the mute function will be activated and volume may not be adjusted. To adjust the volume, move nearer toward the transmitter or orient the infrared emitters on the left housing towards the transmitter.



Sound is automatically muted if noise increases — Mute function

If the infrared rays are obstructed, or the headphones are used outside their effective range, noise will increase and sound will become hard to hear. To avoid potential ear damage as a result of noise, this function mute any sound from the headphones. Sound is automatically restored when you move nearer the transmitter or remove the obstruction.

After listening to the programmes

Take off the headphones, and then turn off the power. (You may hear some noise when you disconnect the AC power adapter from the transmitter before taking off the headphones.)

Replacing the ear pads

 
The ear pads are replaceable. If the ear pads become dirty or worn out, replace them as illustrated below.

The ear pad is not commercially available. You can order replacements from the store where you purchased this system, or at your nearest Sony dealer.

- 1 Remove the old ear pad by pulling it off.



- 2 Place the new ear pad around the housing.

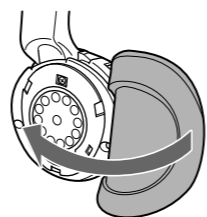

▶ Additional information

Specifications

General

Modulation system	Frequency modulation
Carrier frequency	Right 2.8 MHz Left 2.3 MHz
Frequency response	18 – 22,000 Hz
Power source	DC 1.5 V (size AAA) dry battery
Mass	Approx. 125 g (4.41 oz.) including battery

Supplied accessory

Operating instructions (1)

Design and specifications are subject to change without notice.

Precautions

- When the headphones are not to be used for a long period of time, remove the battery to avoid damage caused by battery leakage and subsequent corrosion.
- Do not leave the cordless stereo headphones in a location subject to direct sunlight, heat or moisture (It is recommended to use the headphones at a of temperature of between 5 °C and 35 °C (41 °F and 95 °F).)
- Do not drop, hit or otherwise subject headphones to strong shocks of any kind. This could damage the product.

Notes on headphones preventing hearing damage

Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, lower the volume or discontinue use.

Caring for others

Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to the people around you.

If you have any questions or problems concerning the headphones that are not covered in this manual, please consult nearest Sony dealer.

Troubleshooting

No sound/Muffled sound

- ➔ Turn on the transmitter first, and then put on the headphones.
- ➔ Check the connection of the audio/video equipment or the AC power adapter.
- ➔ Check that the audio/video equipment connected to the transmitter is turned on.
- ➔ If the transmitter is connected to the headphones jack, raise the volume of the audio/video equipment connected to the transmitter.
- ➔ The mute function is activated.
 - Check if there is any object between the transmitter and the headphones.
 - Use the headphones near the transmitter.
 - Change the position and angle of the transmitter.
- ➔ The headphones' power indicator light dims, flashes or goes off.
 - Replace dry battery with new one.

Distorted sound

- ➔ If the transmitter is connected to the headphones jack, raise the volume of the audio/video equipment connected to the transmitter.
- ➔ The headphones' power indicator light dims, flashes or goes off.
 - Replace dry battery with new one.

Loud background noise

- ➔ Move closer to the transmitter. (As you move away from the transmitter, more noise is likely to be heard. This is inherent in nfrared ray communication and does not mean that there is a problem with the unit itself.)
- ➔ Check that there is no object between the transmitter and the headphones.
- ➔ Check that the infrared sensors are not covered with your hands or hair.
- ➔ If you use the headphones by a window where the sunlight is too strong, draw the curtains/blinds to shut out the direct sunlight, or use the headphones away from the sunlight.
- ➔ Change the position or angle of the transmitter.
- ➔ If the transmitter is connected to the headphones jack, raise the volume of the audio/video equipment connected to the transmitter.
- ➔ The headphones' power indicator light dims, flashes or goes off.
 - Replace dry battery with new one.

Français

AVERTISSEMENT

Pour éviter tout risque d'incendie ou d'électrocution, n'exposez pas cet appareil à la pluie ni à l'humidité.



Traitement des appareils électriques et électroniques en fin de vie (Applicable dans les pays de l'Union Européenne et aux autres pays européens disposant de systèmes de collecte sélective)

Ce symbole, apposé sur le produit ou sur son emballage, indique que ce produit ne doit pas être traité avec les déchets ménagers. Il doit être remis à un point de collecte approprié pour le recyclage des équipements électriques et électroniques. En s'assurant que ce produit est bien mis au rebut de manière appropriée, vous aiderez à prévenir les conséquences négatives potentielles pour l'environnement et la santé humaine. Le recyclage des matériaux aidera à conserver les ressources naturelles. Pour toute information supplémentaire au sujet du recyclage de ce produit, vous pouvez contacter votre municipalité, votre déchetterie ou le magasin où vous avez acheté le produit.

Bienvenue !

Nous vous remercions d'avoir fait l'acquisition de ce casque stéréo sans fil MDR-IF140 de Sony. Avant d'utiliser cet appareil, lisez attentivement le présent mode d'emploi et conservez-le pour toute référence ultérieure.

Le MDR-IF140 est un casque stéréo sans fil fonctionnant par transmission de rayons infrarouges. En raccordant simplement le transmetteur (en option) à un téléviseur ou à un appareil audio équipé d'une prise de casque ou d'une prise de sortie de ligne, vous pouvez écouter une émission sans être gêné par le cordon du casque.

- Casque sans fil à infrarouges n'émettant pas de parasites et résistant aux parasites externes, etc.
- Mécanisme de serre-tête auto-ajustable qui évite à l'utilisateur d'avoir à régler la taille du serre-tête.
- Une commande VOL unique permet de régler à la fois le volume des écouteurs droit et gauche du casque.
- Cet appareil peut être utilisé avec le système de casque sans fil de Sony.

 
Utilisez le casque MDR-140 avec le transmetteur en option.

Le casque MDR-140 doit être utilisé avec le système de casque stéréo sans fil de Sony (en option) (sauf avec le MDR-IF630RK).


▶ Préparatifs

Installation de la pile


- 1 Ouvrez le couvercle du logement de la pile situé sur le boîtier de l'écouteur gauche du casque.

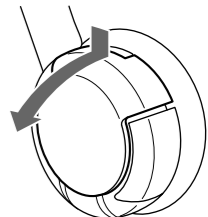

 - 2 Insérez la pile sèche (format AAA) fournie dans le logement de la pile en faisant correspondre la borne ⊕ de la pile au signe ⊕ inscrit dans le logement.

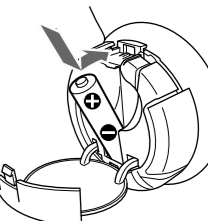

 - 3 Refermez le couvercle du logement de la pile.

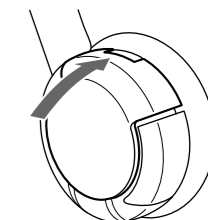

Autonomie de la pile

Pile	Autonomie approximative*1
Pile alcaline LR03/AM-4 (N) de Sony	60 heures*2
Pile au manganèse R03/UM-4 (NU) de Sony	28 heures*2

*1 à 1 kHz, sortie 1 mW +1 mW

*2 La durée mentionnée ci-dessus peut varier en fonction de la température ou des conditions d'utilisation.

Remarques sur la pile

- Ne rechargez pas la pile sèche.
- Ne mettez pas la pile sèche en contact avec des pièces de monnaie ou d'autres objets métalliques. Si le pôle positif et le pôle négatif de la pile sont mis en contact l'un avec l'autre via un objet métallique, de la chaleur peut être générée.
- Si vous prévoyez de ne pas utiliser l'appareil pendant une longue période, retirez-en la pile afin d'éviter des dégâts dus à une fuite d'électrolyte ou à la corrosion.

Quand remplacer la pile

Lorsque la pile devient faible, le voyant d'alimentation faiblit ou le son est déformé ou parasité. Remplacez la pile par une pile neuve le plus tôt possible.

