
Playing an MD within your car stereo system

- 1 Turn down the volume of the car cassette deck and the recorder.
- 2 Set the tape selector to the normal (TYPE I) position and the DOLBY NR, REPEAT, or BLANK SKIP switch to OFF if they are equipped.
- 3 Insert the car connecting pack into the car cassette deck.
- 4 Start playback on the car cassette deck.
- 5 Start MD playback.
- 6 Adjust the volume

If no sound is heard or the car connecting pack is ejected, change playback direction on the car cassette deck.

To remove the car connecting pack, press the ▲ (eject) button of the car cassette deck.

Notes

- Never insert the cord end of the car connecting pack into the cassette insertion door. If you do, the cord may break or the car cassette deck may be damaged.
- The car connecting pack may not work with some car cassette deck.
- The cord should be placed so that it does not hinder driving.
- To disconnect the cord from the recorder, pull it out by grasping the plug. Never pull the plug out by the cord.
- With some car cassette decks, you may hear some rattling noise from the car connecting pack. However, this is not a sign of malfunction.
- Sony guarantees only playback operations on the recorder during use with the car connecting pack. Recording or charging operations are not guaranteed and should not be attempted.

Specifications

Car connecting pack

- Frequency response: 50 to 20,000 Hz (Differs depending on your car cassette deck)
- Dimensions: Approx. 102.4 × 12.1 × 63.8 mm (w/h/d) ($4\frac{1}{8} \times \frac{1}{2} \times 2\frac{5}{8}$ in.)
- Mass: Approx. 42 g (1.5 oz)
- Cord length: 1.5 m

Portable MiniDisc Recorder

Operating Instructions — for the car kit



Supplied accessories

- Car connecting pack (1)
- Carrying case with Velcro strip (1)

Before installation

Do not install the recorder in a location which:


- interferes with your driving.
- may be dangerous for passengers.
- interferes with opening of the glove box or ashtray.
- is a near heat source.
- is exposed to direct sunlight, excessive dust, or moisture (especially on a dashboard).
- is an unstable place.
- may interfere with objects around the recorder.

Sony will not be responsible for any problem that results from the incorrect installation of the unit.


If you have any questions or problems concerning your unit, please contact your nearest Sony dealer.

Installation

- 1 Insert the recorder into the carrying case with Velcro strips.

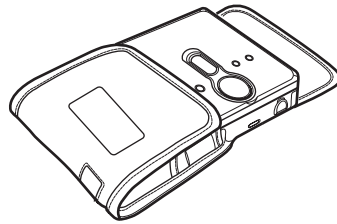

- 2 Wipe the surface of the console box, and then attach the carrying case to the console box with the supplied Velcro strips.

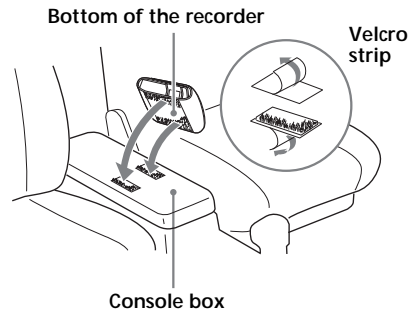

Notes

- Make sure the carrying case is firmly closed and affixed to the console box while the recorder is inside of it. Otherwise the recorder might fall out from the carrying case.
- If your car will be parked for a long time, remove the recorder from the carrying case to prevent its exposure to direct sunlight.

Connection

To listen to the recorder through your car cassette deck, connect it as follows:

