

# When you hold Rolly in your hand

Hold Rolly in the vertical position.  
Click the Play button to play music. Click it again to stop playback.


## Changing a track

To change a track, turn the upper wheel\* about 45° while music is playing.  
To change a group, turn it about 90°.

## Adjusting the volume

To turn up the volume, turn the lower wheel\* to the right while music is playing.  
To turn down the volume, turn it to the left.

\* When you hold Rolly in the vertical position with either end at the top, the wheel at the top or bottom is automatically assigned to each function.

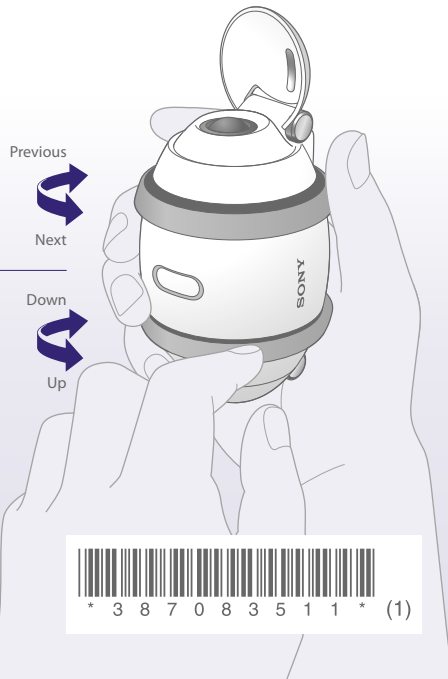


\* 3 8 7 0 8 3 5 1 1 \* (1)

**SONY**

Sound Entertainment Player  
SEP-30BT

# Rolly

## Quick Start Guide

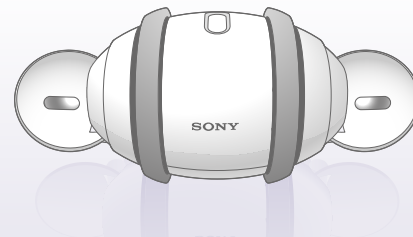

Rolly is pre-installed with sample music and motion data, so that you can try it out right after charging the battery.

### Charge the battery




### Power on



To charge the battery, insert the battery into Rolly, and connect Rolly to your computer using the USB cable.  
When Rolly's Play-button indicator turns from orange to yellow, charging is completed.  
(When you charge the battery using a Rolly Charging Cradle (not supplied), the Play-button indicator goes out when charging is completed.)

# When Rolly is placed on a level surface

Perform motion playback on a spacious level surface.

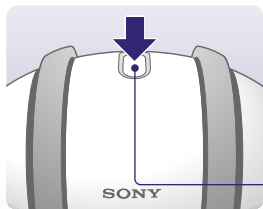

Place Rolly with the SONY logo facing you.

**To play music:** Click the Play button.


**To play music and motion:** Double-click the Play button while music is playing. When playback of a track is finished, motion stops. Only music will be played from the next track.

To stop playback, click the Play button once.

Play button

## Changing a track

You can change a track while only music is playing. You cannot change a track during motion playback.

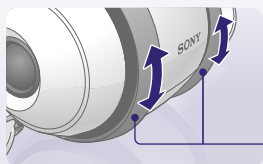


To change a track, push the wheel forward or backward a short distance while music is playing.

To change a group, push the wheel forward or backward further while music is playing.

Wheel

To locate the next track/group

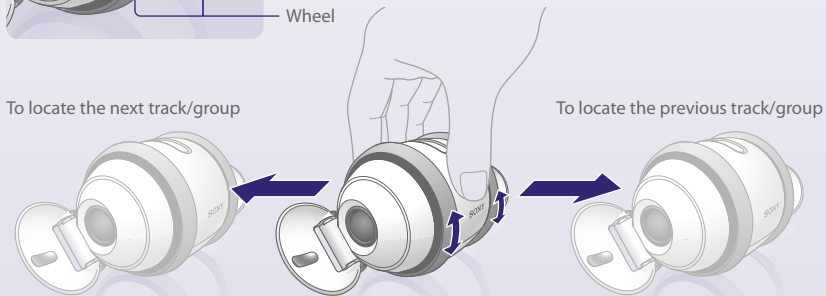

To locate the previous track/group

For details on operations and restrictions (such as the 7-minute maximum play time for motion files) on Rolly, see the Operating Instructions.


## Play-button indicator

The indicator surrounding the Play button changes color to indicate the status of Rolly during playback.

White: While playing a track with motion assigned

Green: While playing a track without motion assigned

Orange: The remaining battery is not enough to play motion.

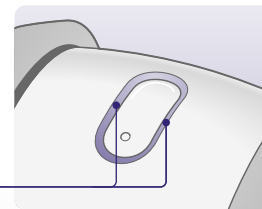

Play-button indicator


## Adjusting the volume

You can adjust the volume while only music is playing. You cannot adjust the volume during motion playback.

To turn up the volume, rotate Rolly clockwise while music is playing.

To turn down the volume, rotate Rolly counterclockwise while music is playing.

To turn down the volume

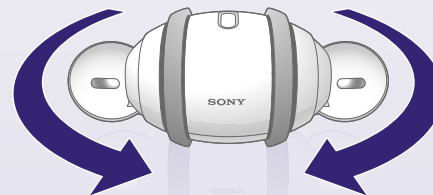

To turn up the volume