

Radio Cassette Player

Operating Instructions
사용설명서



©2003 Sony Corporation Printed in Malaysia



http://www.sony.net/

"WALKMAN" is a registered trademark of Sony Corporation to represent Headphone Stereo products.

WALKMAN is a trademark of Sony Corporation.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area). CE 표시 유효성은 주로 EEA 제국(유럽 경제 지역)에 있는 법적으로 강제된 나라에서만으로 한정됩니다.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.


Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

경고



화재나 감전될 위험이 있으므로 본기에 비나 수분이 닿지 않도록 하십시오.

본 제품을 책상이나 불박이장 같은 좁은 장소에 설치하지 마십시오.


A

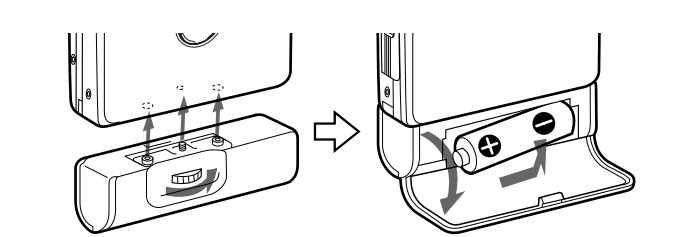




B

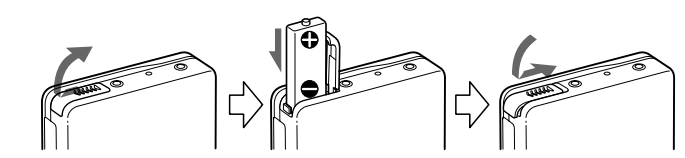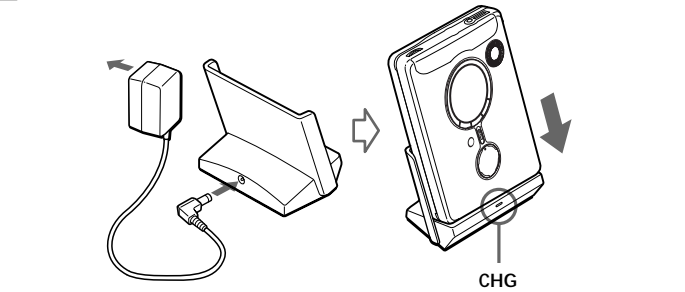

C

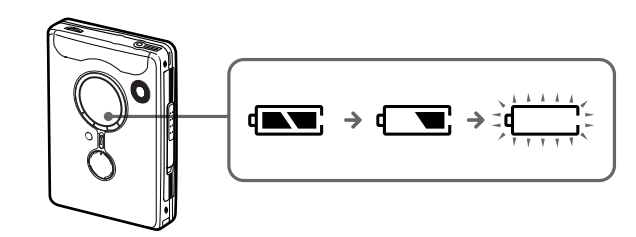

D

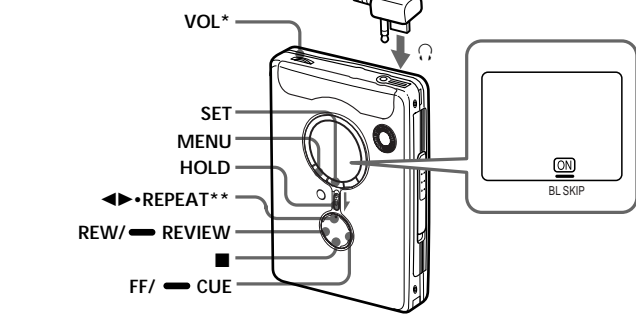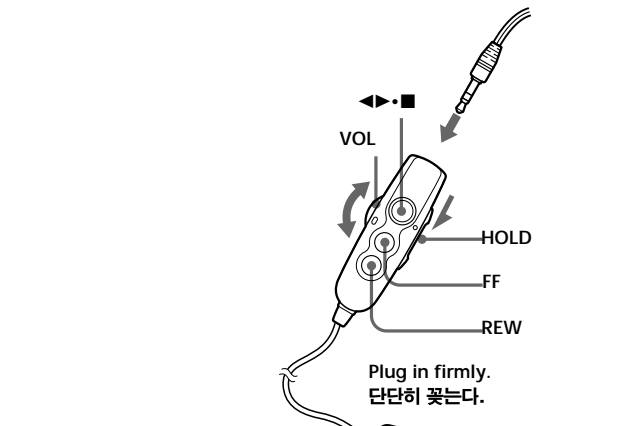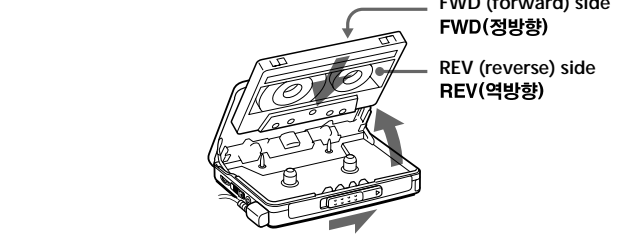

- * There is a tactile dot beside VOL on the main unit to show the direction to turn up the volume.
- ** The button has a tactile dot.
- * 본체의 VOL 옆에는 음량을 높일 수 있는 방향으로 돌기가 있습니다.
- ** 버튼에는 돌기가 있습니다.

English

- To prevent fire, do not cover the ventilation of the apparatus with newspapers, table-cloths, curtains, etc. And don't place lighted candles on the apparatus.
- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- Certain countries may regulate disposal of the battery used to power this product. Please consult with your local authority.

Preparations

Prepare a dry battery (not supplied) or the rechargeable battery (supplied).

Dry Battery A

Attach the supplied battery case, and then insert one R6 (size AA) battery with correct polarity. Note For maximum performance we recommend that you use a Sony alkaline battery.

Rechargeable Battery B

Charge the rechargeable battery before using it for the first time.

- Insert the supplied rechargeable battery NH-10WM into the rechargeable battery compartment with correct polarity.
- Connect the supplied AC power adaptor to the charging stand, plug in the AC power adaptor to the house current (mains). If the plug does not fit to your mains, attach the supplied AC plug adaptor (Saudi Arabian model only).
- Place the main unit on the charging stand. The CHG lamp will light up during charging. Full charging takes about 6 hours regardless of the battery power remaining. The CHG lamp will go off when the battery is fully charged.

Notes

- This charging stand charges the rechargeable battery based on a timer. If you remove the unit from the charging stand while it is charging, the timer will be reset and full charging will take about 6 hours when you place the unit on the charging stand again.
- You can use the unit before the CHG lamp goes off, but in that case, battery life will be shorter depending on the charging time.

- Do not use the unit while it is charging. Remove the unit from the charging stand when using it.
 - If you operate the unit while it is charging, the battery will not be charged.
 - If you operate the unit while it is charging, this may cause a malfunction.
- Do not place the unit on the charging stand without the rechargeable battery. Otherwise, this may cause a malfunction.

When to replace/charge the battery C

Replace or charge the battery when " " flashes in the display.

Battery life* (Approx. hours)

Sony alkaline LR6 (SG)**	
Tape playback	50
Radio reception	56

Rechargeable battery NH-10WM

Tape playback	22
Radio reception	25

Sony alkaline LR6 (SG)** and Rechargeable NH-10WM

Tape playback	72
Radio reception	81

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association). (Using a Sony HF series cassette tape)
** When using a Sony LR6 (SG) alkaline dry battery (produced in Japan).

- Notes
- The battery life may be shorter depending on the operating condition, the surrounding temperature and battery type.
 - The AVLS setting (see "Using the Menu") will be cancelled when you replace the battery.

Playing a Tape D

- Insert a cassette and if the HOLD function is on, slide the HOLD switch in the opposite direction of the arrow to unlock the controls.
- Press ◀▶•REPEAT on the main unit and adjust the volume with VOL. (On the remote control, press ▶(play)•■(stop).)

When adjusting the volume on the remote control Set the VOL control on the main unit to around 6.

When adjusting the volume on the main unit Set the VOL control on the remote control at maximum.

Operation on the remote control

To	Press
Switch playback to the other side	◀▶ for 2 seconds or more during playback
Stop playback	■ once during playback

Repeat the current track (Repeat Single Track function) ▶▶•■ twice during playback To stop a single repeat, press ▶▶•■ once.

Fast forward* FF during stop Rewind* REW during stop

Search forward during playback (CUE) Press and hold FF and release it at the point you want

Search backward during playback (REVIEW) Press and hold REV and release it at the point you want

Play the next track/repeating 9 tracks from the beginning (AMS**) FF once/repeatedly during playback

Play the same side from the beginning (Skip Reverse function) FF for 2 seconds or more during stop

Play the other side from the beginning (Skip Reserve function) FF for 2 seconds or more during beginning stop

Play the same side from the beginning (Rewind Auto Play function) REW for 2 seconds or more during beginning stop

Operation on the main unit

To Press Switch ▶▶•REPEAT during playback during playback

Stop playback ■ (stop)

Repeat the current track (Repeat Single Track function) ▶▶•REPEAT for 2 seconds or more during playback To stop a single repeat, press ▶▶•REPEAT once.

Fast forward* FF/CUE during stop Rewind* REW/REVIEW during stop

Search forward during playback (CUE) Press and hold FF/CUE and release it at the point you want

Search backward during playback (REVIEW) Press and hold REW/REVIEW and release it at the point you want

Play the next track/repeating 9 tracks from the beginning (AMS**) FF/CUE once or repeatedly during playback

Play the other side from the beginning (Skip Reverse function) FF/CUE for 2 seconds or more during stop

Play the same side from the beginning (Rewind Auto Play function) REW/REVIEW for 2 seconds or more during stop

Play the other side from the beginning (Skip Reserve function) FF for 2 seconds or more during beginning stop

Play the same side from the beginning (Rewind Auto Play function) REW for 2 seconds or more during beginning stop

한국어

- 본 제품의 환기구에는 화재 방지를 위해 신문이나 테이프 클로스, 커튼 등으로 막지 마십시오. 본 제품 위에는 촛불을 올려놓지 마십시오.
- 화재나 감전될 위험이 있으므로 물이 들어있는 꽃병 등은 본 제품 위에 올려놓지 마십시오.
- 일부 나라에서는 본 제품의 전원으로 사용하는 배터리의 처분 방법에 대해서 규제하고 있습니다. 현지 관할 기관으로 문의하여 주십시오.

준비

전전지 (배터팩) 또는 충전식 배터리 (부속품)를 준비합니다.

간전지 A

부속된 간전지 케이스를 부착한 다음 R6(AA크기) 배터리 한 개를 극을 맞추어 넣습니다.

충전식 배터리 B

충전식 배터리는 처음 사용하기 전에 충전하여 주십시오.

- 부속된 충전식 배터리 NH-10WM를 충전기에 극을 맞추어 넣습니다.
- 부속된 AC 전원 어댑터를 충전 스탠드에 연결하고 AC 전원 어댑터를 가정용 전원(주전원)에 연결합니다. 플러그가 주전원과 맞지 않을 때에는 부속된 AC 플러그 어댑터를 부착합니다(사우디아라비아 모델 전용).
- 본체를 충전 스탠드 위에 올려놓습니다. 충전 중에는 CHG 램프가 점등됩니다. 만충전하려면 약 6시간 걸립니다. 배터리가 만충전되면 CHG 램프가 꺼집니다.

주의점

- 본 충전 스탠드는 타이머를 기준으로 충전식 배터리를 충전합니다. 충전 중에 기기를 충전 스탠드에서 빼면 타이머가 재설정되므로, 다시 기기를 충전 스탠드에 올려놓고 만충전하려면 6시간이 걸립니다.
- CHG 램프가 꺼지기 전에 기기를 사용할 수 있지만, 충전 시간에 따라 배터리 수명은 짧아집니다.
- 충전 중에는 본 기기를 사용하지 마십시오. 본 기기를 사용하려면 충전 스탠드에서 빼 주십시오.
 - 충전 중에 본 기기를 사용하면 배터리가 충전되지 않습니다.
 - 충전 중에 본 기기를 사용하면 고장의 원인이 됩니다.
- 충전식 배터리를 넣지 않은 상태에서는 본 기기를 충전 스탠드에 올려놓지 마십시오. 그렇지 않으면 고장의 원인이 됩니다.

* Press ▶▶•REPEAT (on the remote control, press ▶▶•■) during fast forward or rewind to start playback.
**Automatic Music Sensor

To skip a long blank space (BL SKIP* function)

- Press MENU repeatedly to set " " (the cursor) in the display to BL SKIP.
- Press SET to show " ".

* When the BL SKIP function is on, the tape is fast-forwarded to the next track if there is a blank space longer than 12 seconds.

배터리 교체/충전 시기 C

" "가 표시되면서 깜박이면 배터리를 교체하거나 충전합니다.

전지 수량* (약 시간)	
Sony 알칼라인 LR6(SG)**	
테이프 재생	50
라디오 수신	56

충전식 배터리 NH-10WM

테이프 재생	22
라디오 수신	25

Sony 알칼라인 LR6(SG)** 및 충전식 NH-10WM

테이프 재생	72
라디오 수신	81

* JEITA(Japan Electronics and Information Technology Industries Association)의 기준에 따라 측정함(Sony HF 시리즈 카세트 테이프 사용)
** LR6(SG) Sony 알칼라인 전전지 (일본산)를 사용할 경우

- 주의점
- 사용상태 주위의 온도나 배터리의 종류에 따라서 배터리의 지속시간이 짧아지는 경우가 있습니다.
 - 배터리를 교환하면 AVLS 설정은 취소됩니다(메뉴 사용하기를 참조).

테이프 재생하기 D

- 카세트를 넣고 HOLD 기능이 켜져 있을 때에는 HOLD 스위치를 화살표 반대 방향으로 밀어서 컨트롤 스위치의 잠금을 해제합니다.
- 본체에서 ▶▶•REPEAT를 누르고 VOL로 음량을 조절합니다.(리모컨에서는 ▶▶(재생)•■(정지)를 누릅니다.)

리모컨에서 음량을 조절할 경우 본체의 VOL 컨트롤을 6경도로 설정해 놓습니다.

본체에서 음량을 조절할 경우 리모컨의 VOL 컨트롤을 최대로 설정해 놓습니다.

리모컨에서의 조작

목적	누르는 버튼
반대면의 재생으로 전환	재생 중 ▶▶•■를 2초 이상 누른다
재생 정지	재생 중 ▶▶•■를 한 번 누른다

현재 곡 반복 (단일곡 반복 기능) 재생 중에 ▶▶•■를 두 번 누른다 단일 반복 재생을 중지하려면 ▶▶•■를 한 번 누른다.

고속감기* 정지 중에 FF 방향으로 움직인다

고속되감기* 정지 중에 REW 방향으로 움직인다

재생 중에 앞방향 검색하기(CUE) FF 방향으로 움직인 채 있다가 원하는 위치에서 놓는다

재생 중에 뒷방향 검색하기(REVIEW) REW 방향으로 움직인 채 있다가 원하는 위치에서 놓는다

다음 곡/이전 8곡을 처음부터 재생 (AMS**) 재생 중에 FF 방향으로 한 번/반복해서 움직인다

현재 곡/이전 8곡을 처음부터 재생 (AMS**) 재생 중에 REW 방향으로 한 번/반복해서 움직인다

반대 면을 처음부터 재생 (스킵 리버스 기능) 정지 중에 FF 방향으로 2초 이상 움직인 채 있다

현재 면을 처음부터 재생 (리와인드 자동 재생 기능) 정지 중에 REW 방향으로 2초 이상 움직인 채 있다

본체에서의 조작

목적	누르는 버튼
반대면의 재생으로 전환	재생 중 ▶▶•REPEAT를 누른다
재생 정지	■(정지)를 누른다

현재 곡 반복 (단일곡 반복 기능) 재생 중에 ▶▶•REPEAT를 2초 이상 누른다 단일 반복 재생을 중지하려면 ▶▶•REPEAT를 한 번 누른다.

고속감기* 정지 중에 FF/CUE를 누른다

고속되감기* 정지 중에 REW/REVIEW를 누른다

재생 중에 앞방향 검색하기(CUE) FF/CUE를 누른 채 있다가 원하는 위치에서 놓는다

재생 중에 뒷방향 검색하기(REVIEW) REW/REVIEW를 누른 채 있다가 원하는 위치에서 놓는다

다음 곡/다음 9곡을 처음부터 재생 (AMS**) 재생 중에 FF/CUE를 한 번 또는 반복해서 누른다

현재 곡/이전 8곡을 처음부터 재생 (AMS**) 재생 중에 REW/REVIEW를 한 번 또는 반복해서 누른다

반대 면을 처음부터 재생 (스킵 리버스 기능) 정지 중에 FF/CUE를 2초 이상 누른다

현재 면을 처음부터 재생 (리와인드 자동 재생 기능) 정지 중에 REW/REVIEW를 2초 이상 누른다

* 고속감기 또는 고속되감기 중에 재생을 시작하려면 ▶▶•REPEAT(리모컨에서는 ▶▶•■)을 누른다.
**Automatic Music Sensor(자동 음악 센서)

긴 공백을 스킵하려면 (BL SKIP* 기능)

- MENU를 반복하여 눌러 표시화면에서 " " (커서)를 BL SKIP으로 설정합니다.
- SET을 눌러 " "을 표시합니다.

* BL SKIP 기능이 켜지면, 12초 이상의 공백이 있을 때 다음 곡으로 마이프가 고속감기됩니다.

(뒷면에 계속)

(turn over)

